


ClubHub®

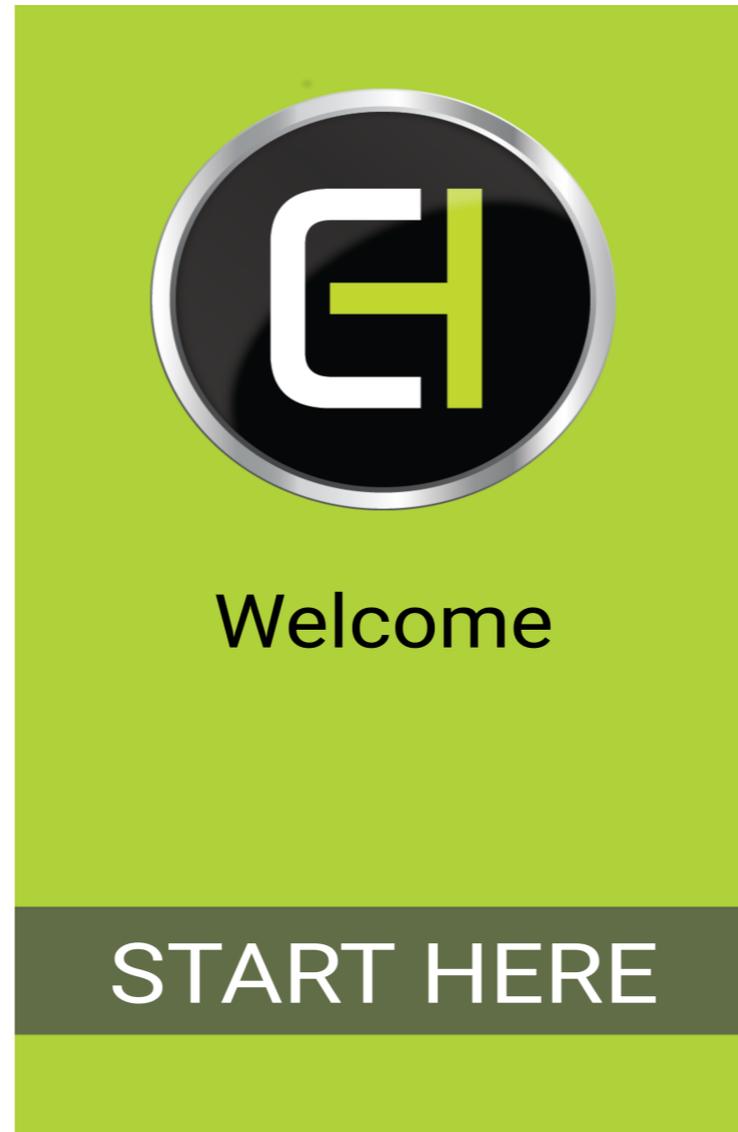

Android™ User Guide

Table of Contents

Setup	4
Adding Clubs to Your Bag.....	8-13
Settings	17
My Clubs.....	20-24
Play Round Mode	28
Play Round.....	29-38
Range Mode	39
Range.....	40-42
Track Performance	43
Recent Rounds.....	45-49
Recent Range.....	54-55
Club Stats.....	56-59
Scoring Stats.....	60-65
Favorite Shots.....	66-67
Favorite Rounds.....	68-69

Welcome to ClubHub!

You are about to use the most complete sensor system in golf.

This user guide will help you get the most enjoyment and game improvement out of your ClubHub system.

We will show you how to access the many features built into this simple-to-use system. We will explain certain key terms and we will give you tips on how to get the best results out of this advanced, user-friendly product.

Please Note: numbered regions on the following screen images correspond to numbered instructions in an accompanying list.

Setup

IMPORTANT

To have a quick and error-free ClubHub sync experience, please follow this process.

Do not start the sync process on the app before finishing steps 1 and 2 below.

1. Hold the ClubHub sensor by the screw base and pinch the cap below the ridged grooves to remove. Take out the plastic battery tab. Put the cap back on and press down firmly until you hear two clicks. To ensure that the cap is latched properly, pull the cap from both sides.
2. Install a ClubHub on each of your clubs by twisting the screw into the hole at the top of the club grip. It is important to fit the ClubHub snugly. Avoid excessive force as it can damage the grip hole.

CLUBHUB



Player Profile

1

name

2

user@sample.com

3

Male

Female

4

Men's Clubs

Women's Clubs

SET UP CLUBHUBS

5

Create a New Player Profile

1

Enter the player name.

2

Enter a valid email address.

3


Select player gender.

4

Select Men's or Women's Clubs.


5

Tap **SET UP CLUBHUBS** to advance to the Club List.

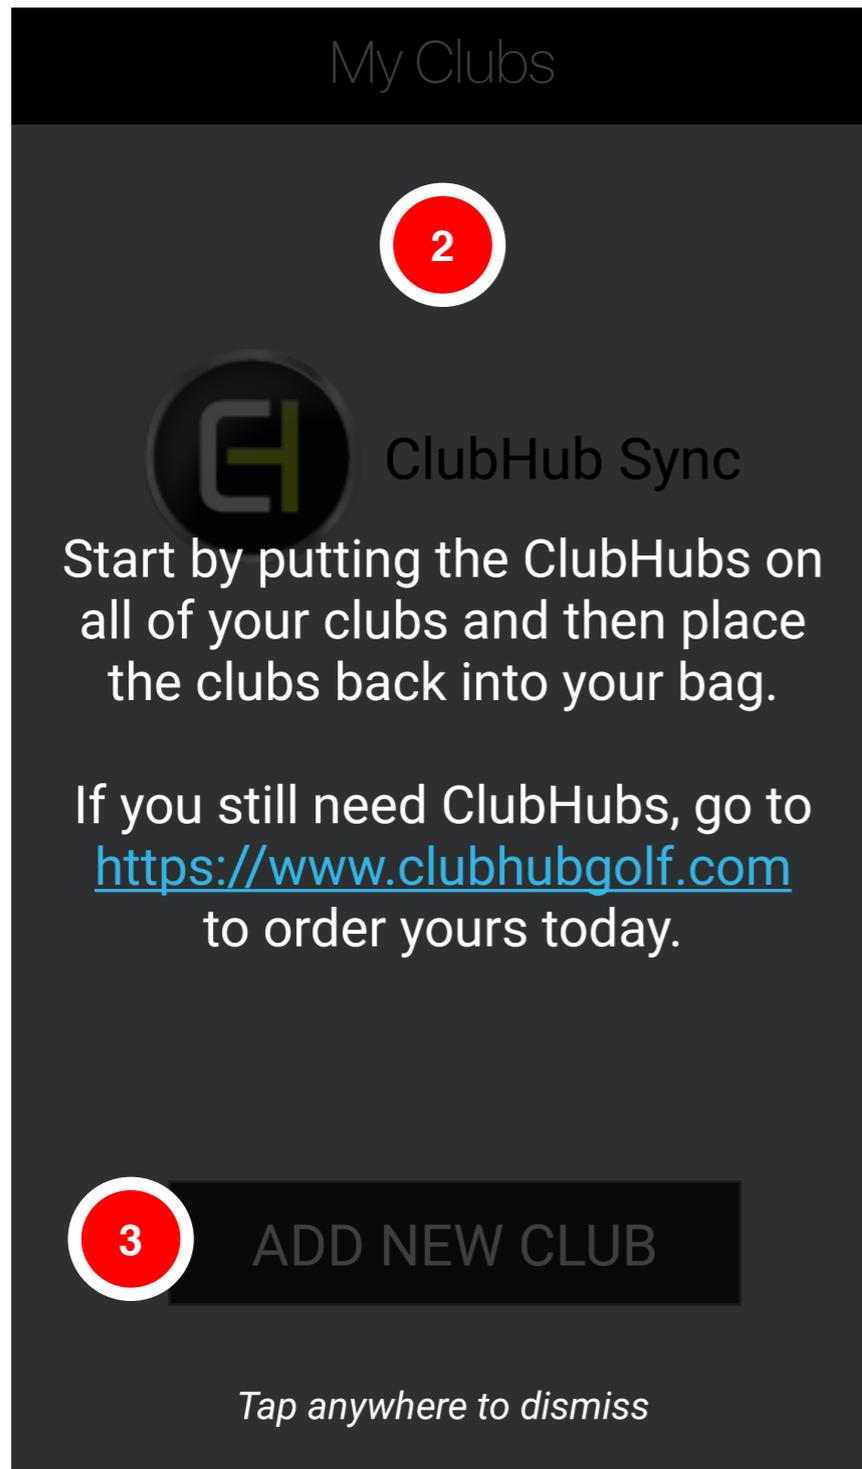

Club Setup

- 1 Enable Bluetooth on your mobile device to ensure connection to the ClubHub.
- 2 Tap anywhere on the screen to dismiss the overlay.
- 3 Tap **ADD NEW CLUB** to create your bag of clubs.

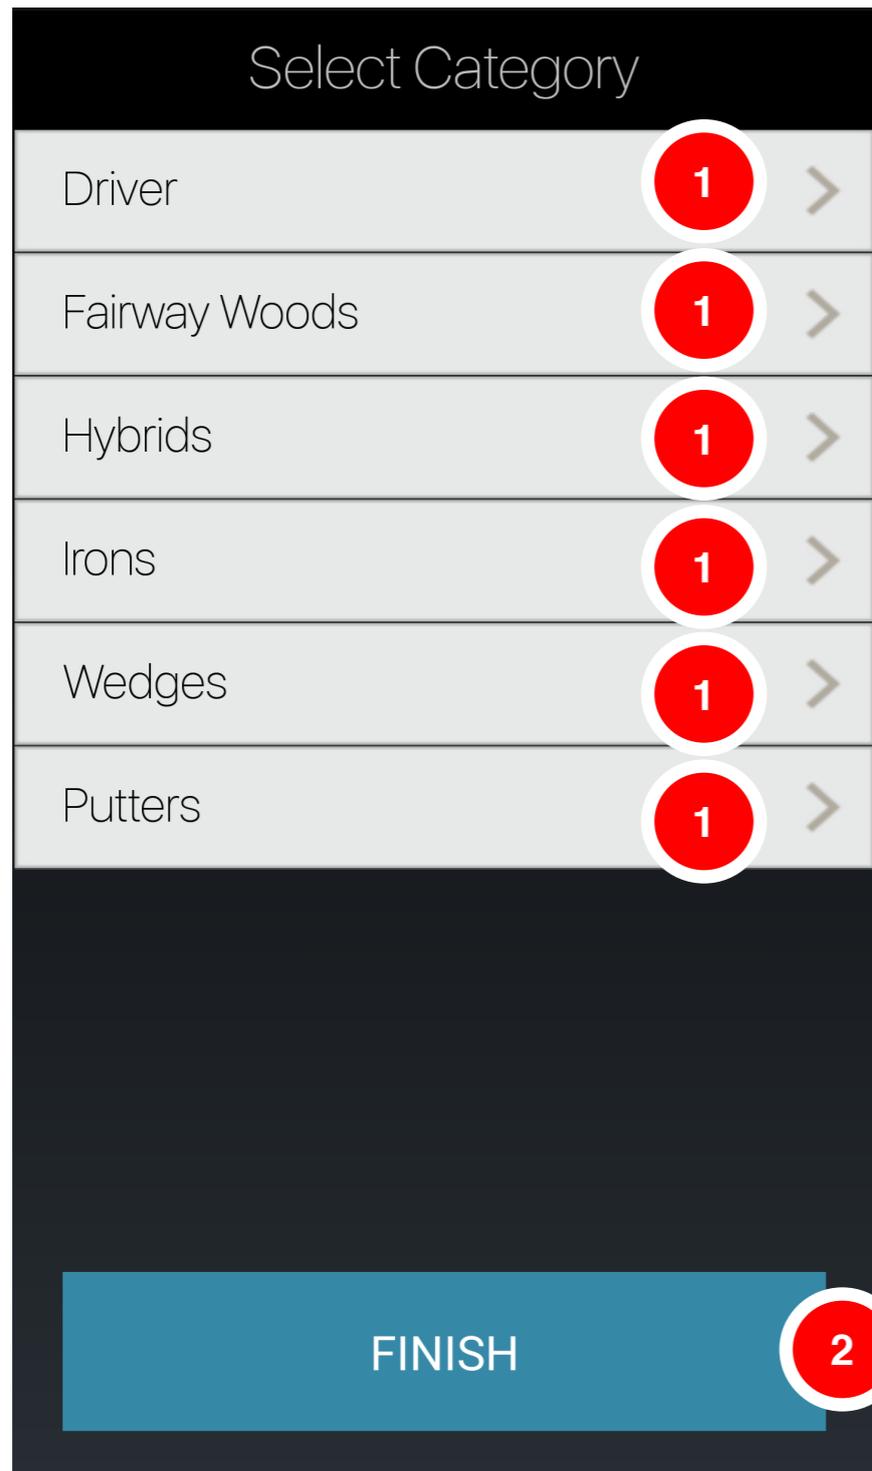


Adding Clubs to Your Bag - Categories -

1 Tap the category of the club you want to add. It is recommended to start with the longest club (i.e. driver) and finish with the shortest club (i.e. putter) to keep track of the process. Select a club from each category on the next screen.

2 When all clubs have been added tap **FINISH**.

i PW is included in the Irons category because it is usually sold in an iron set.


i For any category in the list which has a club already added, its text appears in bold type.

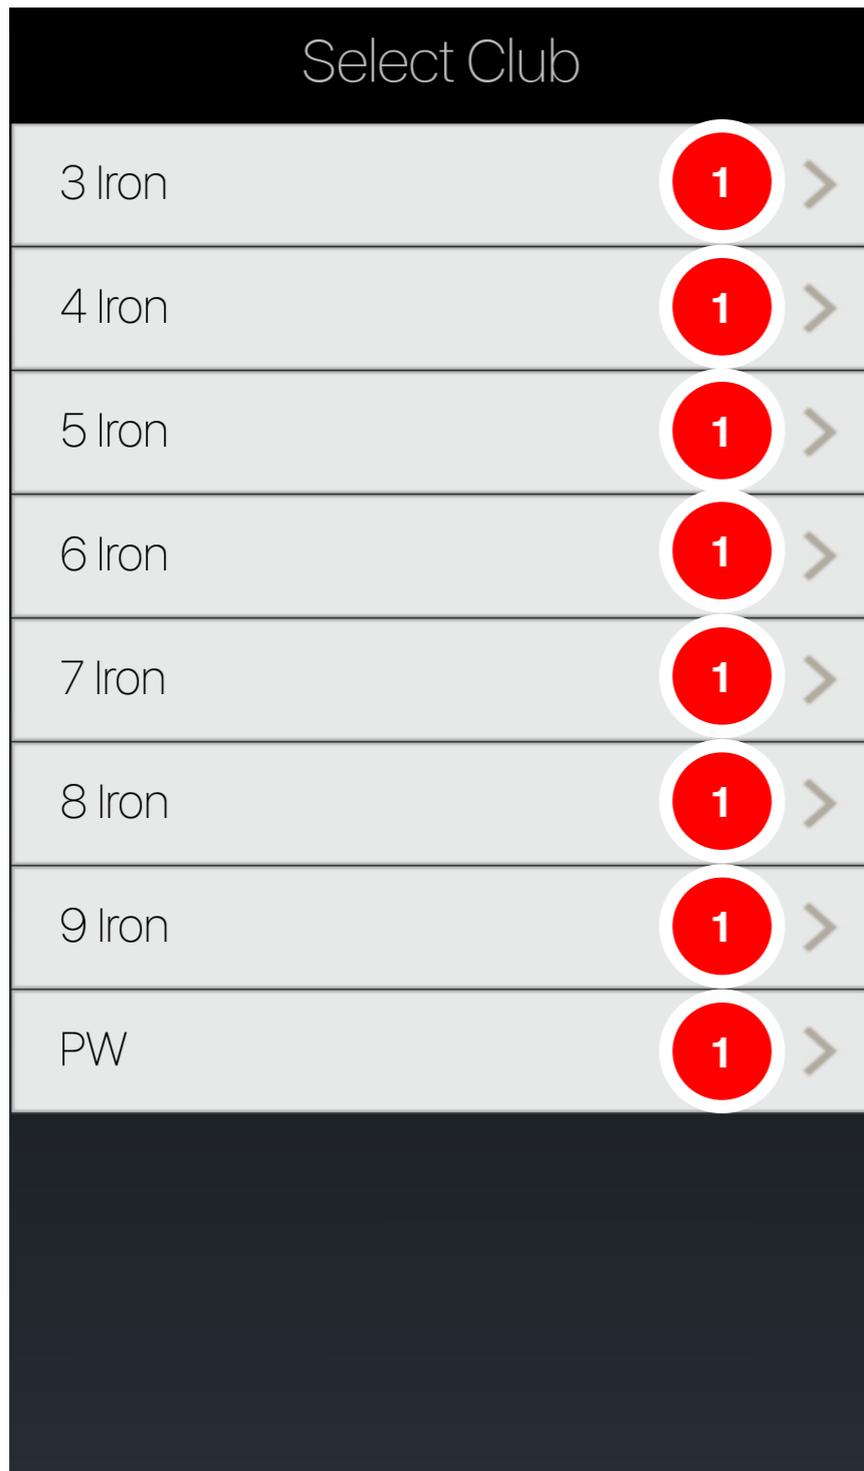

Adding Clubs to Your Bag - Clubs -

- 1 Tap a club name to add the selected club. This displays the Club Detail.

Adding Clubs to Your Bag

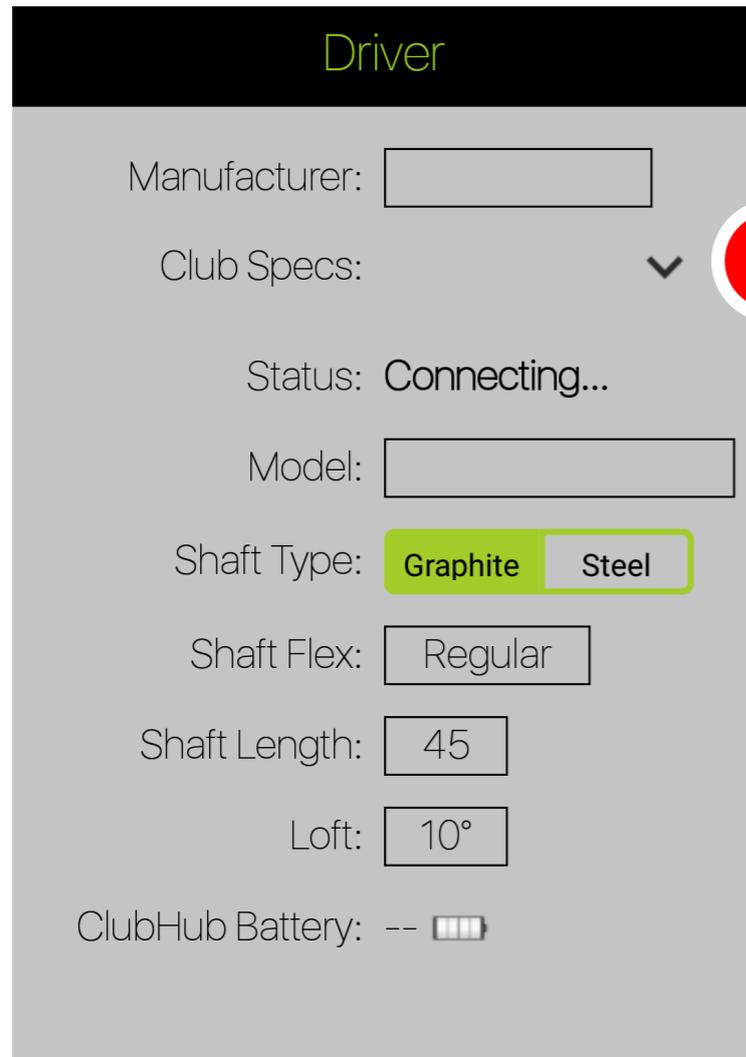

Detail Showing



Detail Hidden

1 Tap ^ / v to hide/show the club detail settings.

Adding Clubs to Your Bag - With Club Detail -

Driver

1 Manufacturer:

Club Specs: 2

Status: Connecting...

3 Model:

4 Shaft Type:

Shaft Flex:


5 Shaft Length:

Loft:

ClubHub Battery: --


6

- 1 Enter the manufacturer name.
 - 2 Tap to hide detailed club configuration settings. If detail is hidden, the screen on the next page will be shown.
 - 3 Enter the club model.
 - 4 Select the shaft type.
 - 5 Tap the Shaft Flex, Shaft Length or Loft box to show a list of choices from a well known list of values.
 - 6 **NEXT CLUB** will appear at the bottom of the screen after connecting a club.
- i** If clubs are non-standard lengths, please specify shaft length. This will affect calculated club head speed.
- i** Shaft Length for some clubs is specified as a single value in inches (i.e. drivers, woods and hybrids) and for other clubs (i.e. irons, wedges and putters) it's defined as a standard length +/- an offset. The net length (standard length + offset) is displayed in Shaft Length.

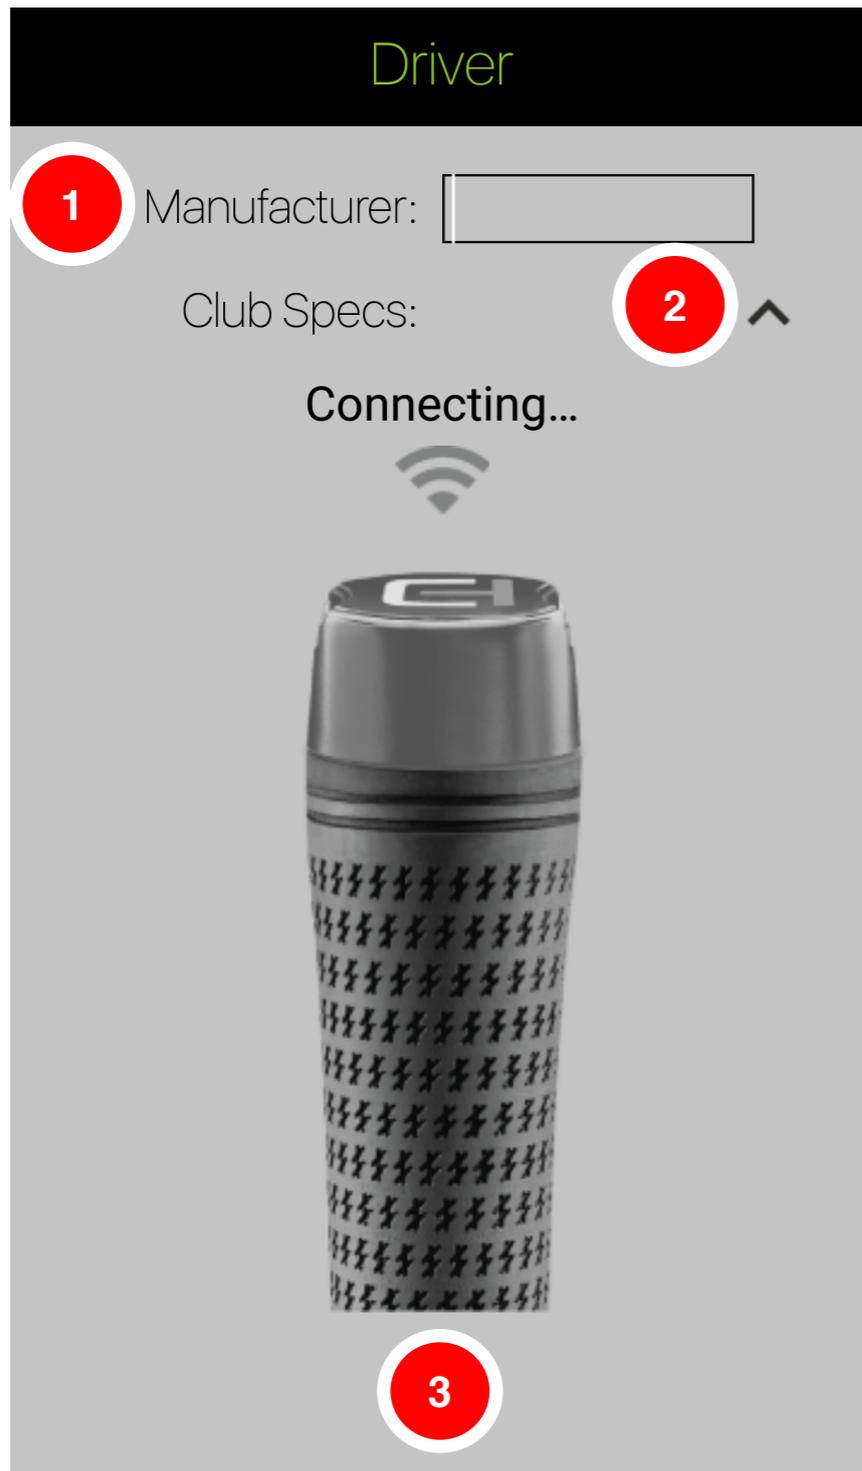

Adding Clubs to Your Bag - Without Club Detail -


- 1 Enter the manufacturer name.
- 2 Tap ^ to show detailed club configuration settings.
- 3 **NEXT CLUB** will appear at the bottom of the screen after connecting a club.

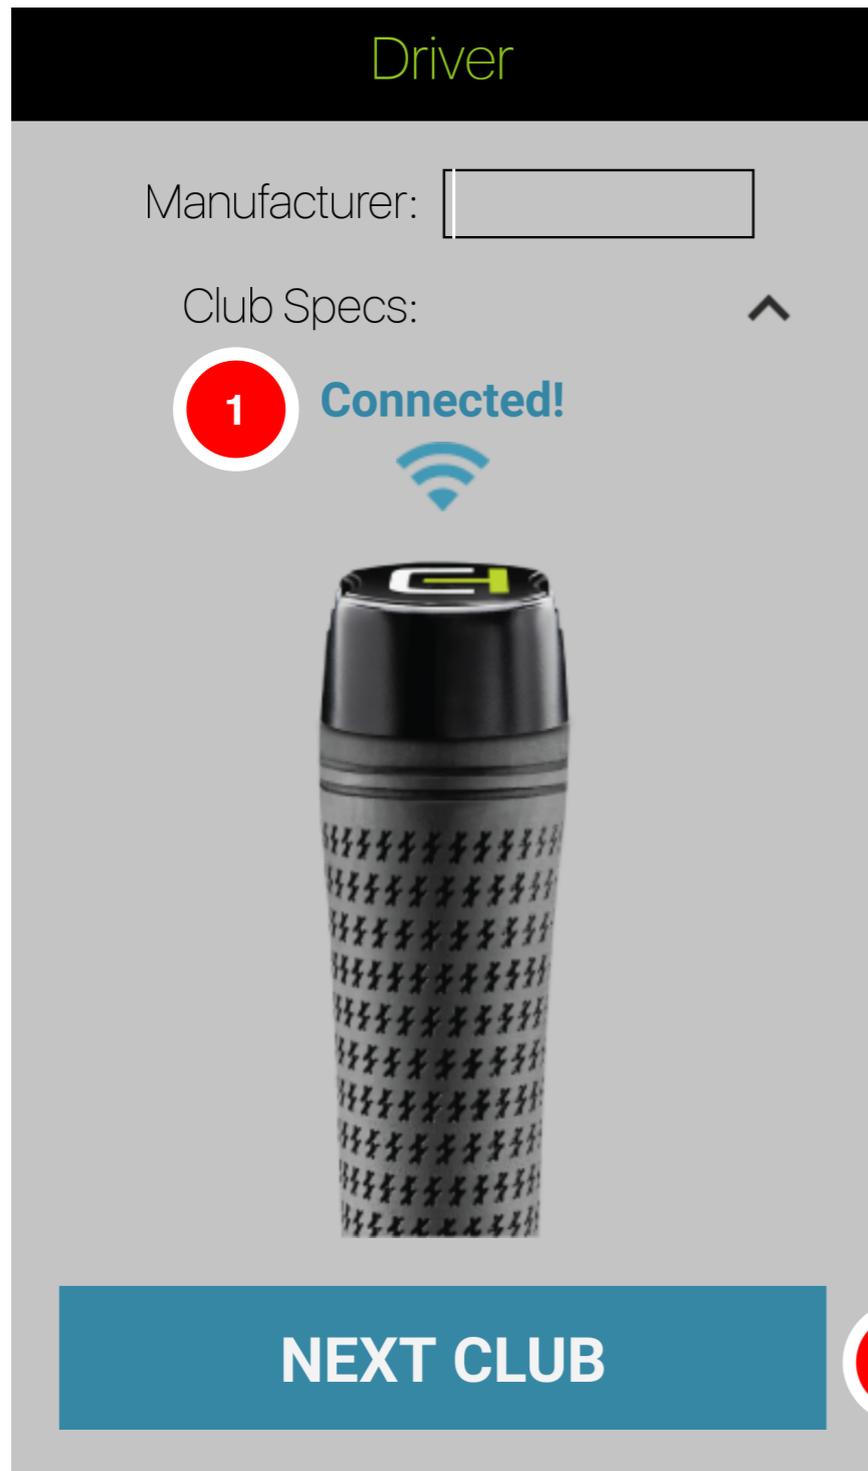

Adding Clubs to Your Bag - Sync With Phone -


- 1** Pull the named club from your bag and put the club in play (head down/grip up). In a few seconds you should hear a chime indicating the connection has completed. **NEXT CLUB** will appear at the bottom of the screen. The status will change to **Connected!**
- 2** Tap **NEXT CLUB** to save this club and continue to another club.

i After configuring a club, put that club out of play (head up/grip down) before configuring the next club.

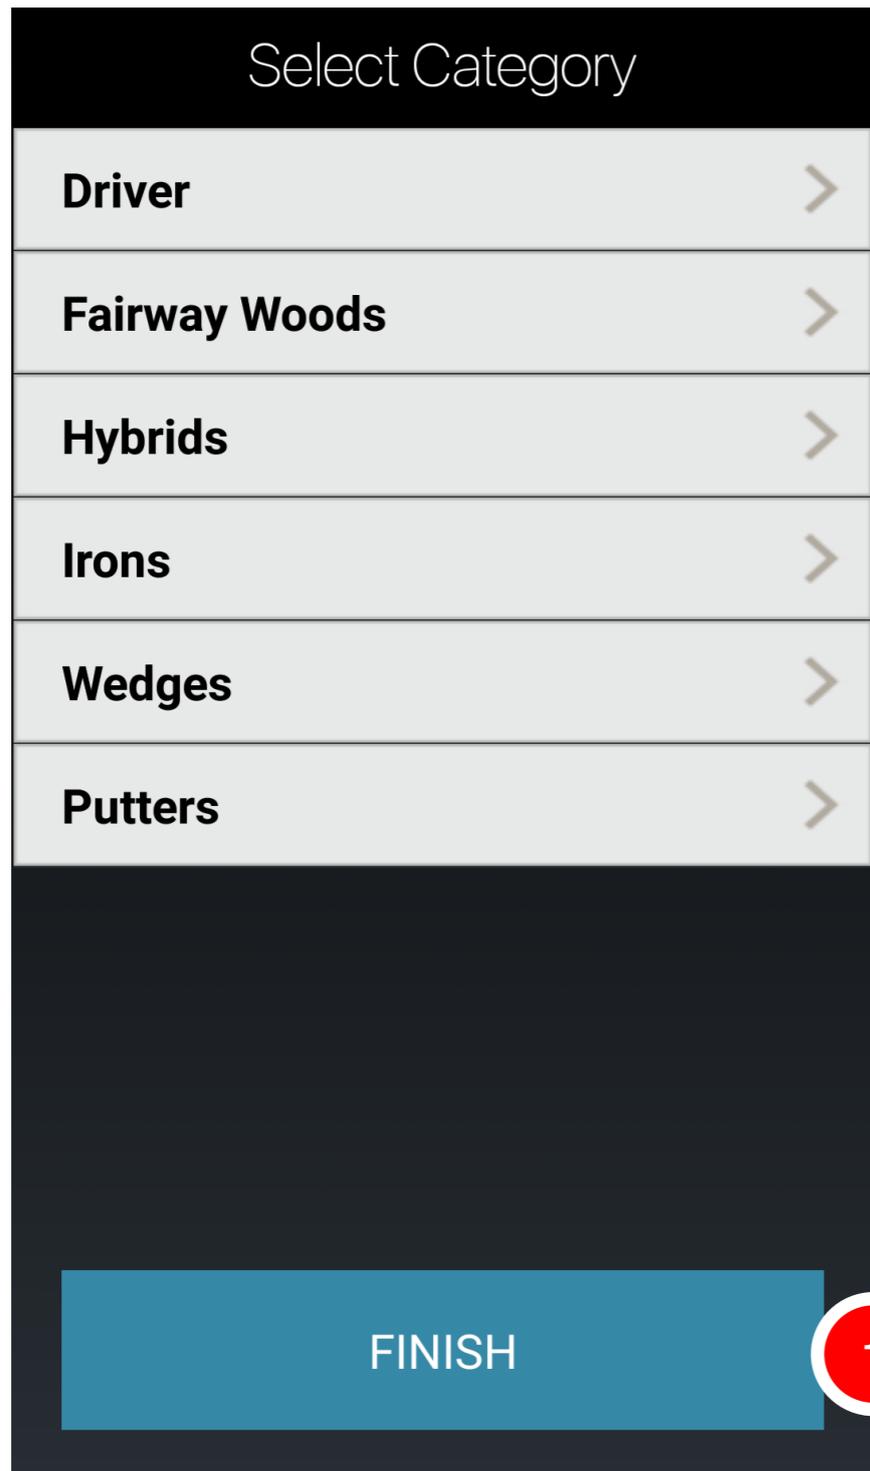

Completing Setup


1 Tap **FINISH** when all clubs have been added.

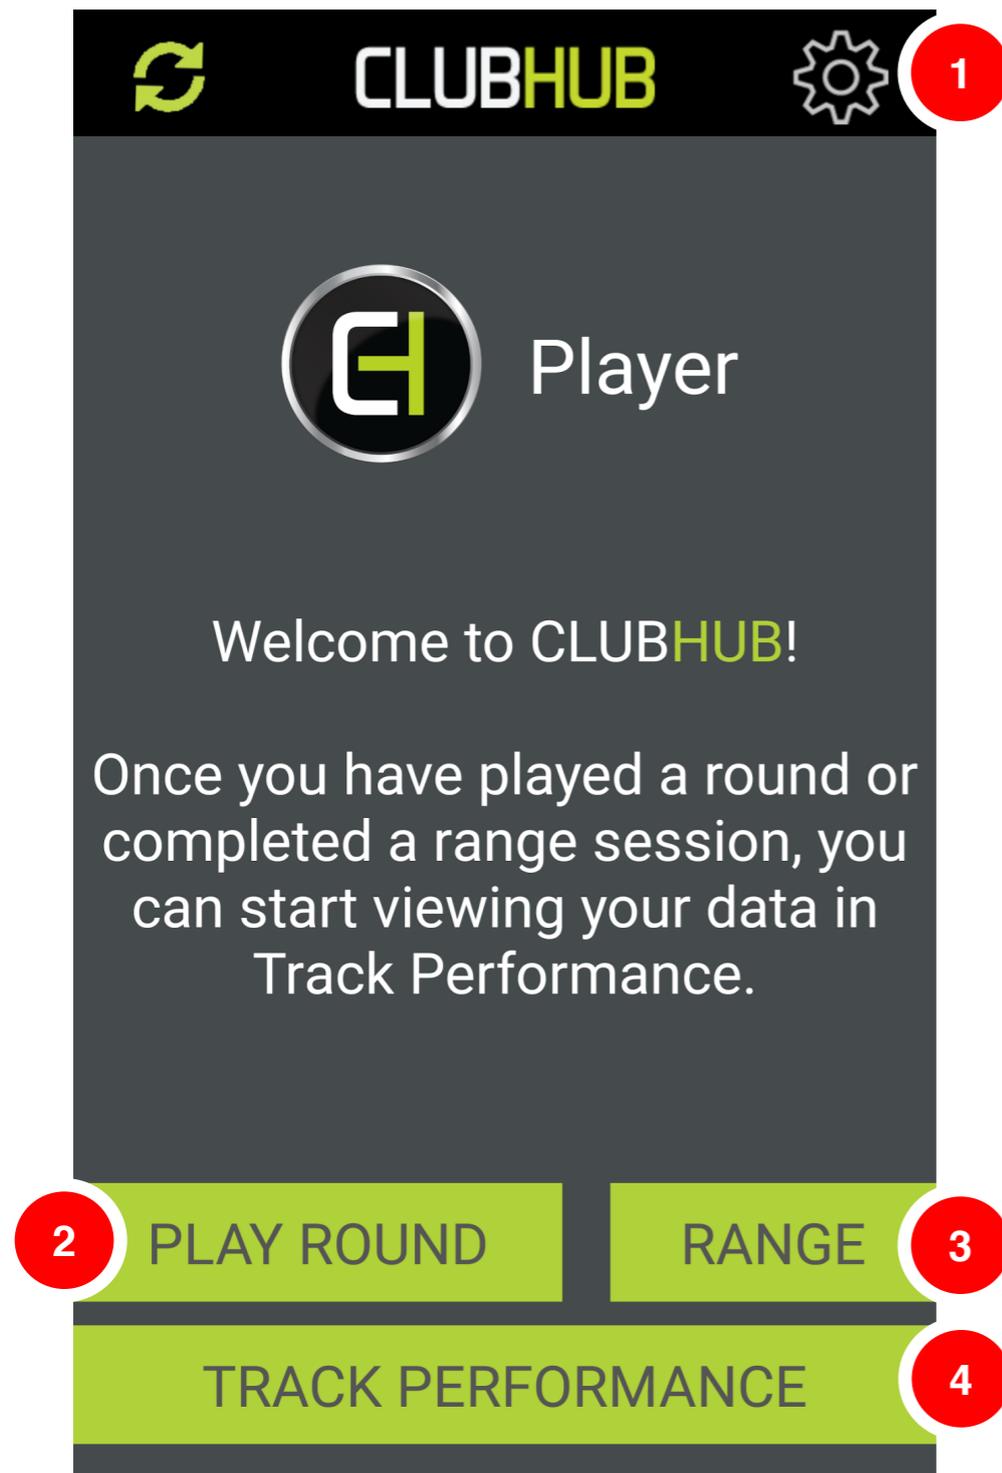

Home Screen - No Rounds Recorded -

- 1 Tap the gear icon to go to Settings.
- 2 Tap **PLAY ROUND** to record a round.
- 3 Tap **RANGE** to record a practice session.
- 4 Tap **TRACK PERFORMANCE** to review recorded shots.

i To automatically record a round you must have a full set of sensors, if not, you will enter Limited Play Mode.

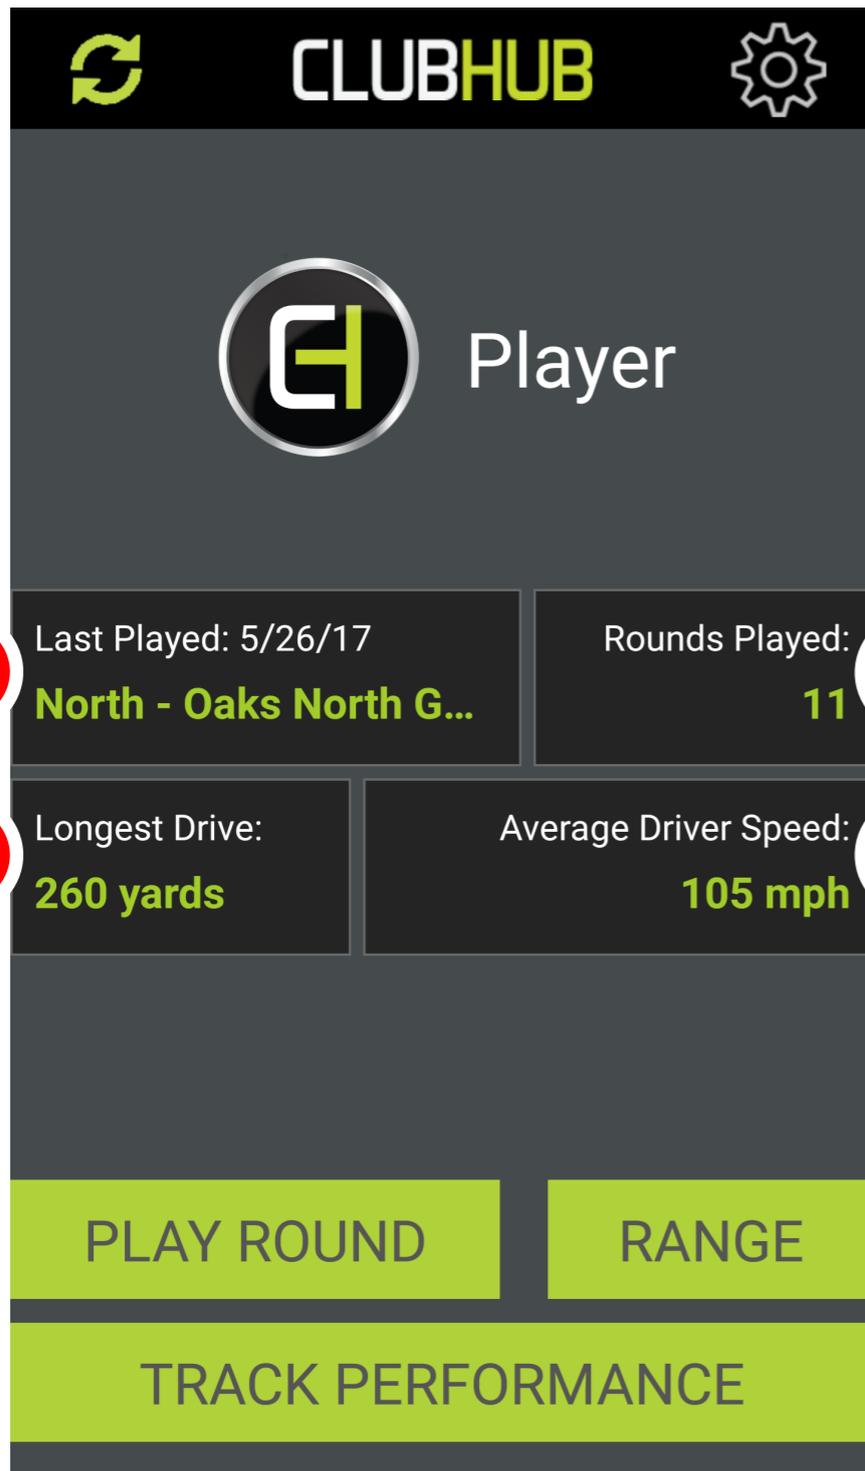

Home Screen - Rounds Recorded -

- 1 Tap the **Last Played** box to display the Review Round Details for the most recently played round.
- 2 Tap the **Rounds Played** box to display the Recent Rounds List.
- 3 Tap the **Longest Drive** box to display a list of driver swings.
- 4 Tap the **Average Driver Speed** box to show Club Stats to display the summary stats for driver swings.

Settings

The screenshot shows the CLUBHUB app interface. At the top, there is a navigation bar with a refresh icon, the text 'CLUBHUB', and a gear icon for settings, which is circled in red. Below the navigation bar is a player profile section with a circular icon containing a stylized 'E' and the word 'Player'. The profile is followed by a grid of statistics: 'Last Played: 5/26/17' with a link to 'North - Oaks North G...', 'Rounds Played: 11', 'Longest Drive: 260 yards', and 'Average Driver Speed: 105 mph'. At the bottom, there are three buttons: 'PLAY ROUND', 'RANGE', and 'TRACK PERFORMANCE'.

 CLUBHUB 

 Player

Last Played: 5/26/17
[North - Oaks North G...](#)


Rounds Played:
11

Longest Drive:
260 yards

Average Driver Speed:
105 mph


PLAY ROUND RANGE

TRACK PERFORMANCE

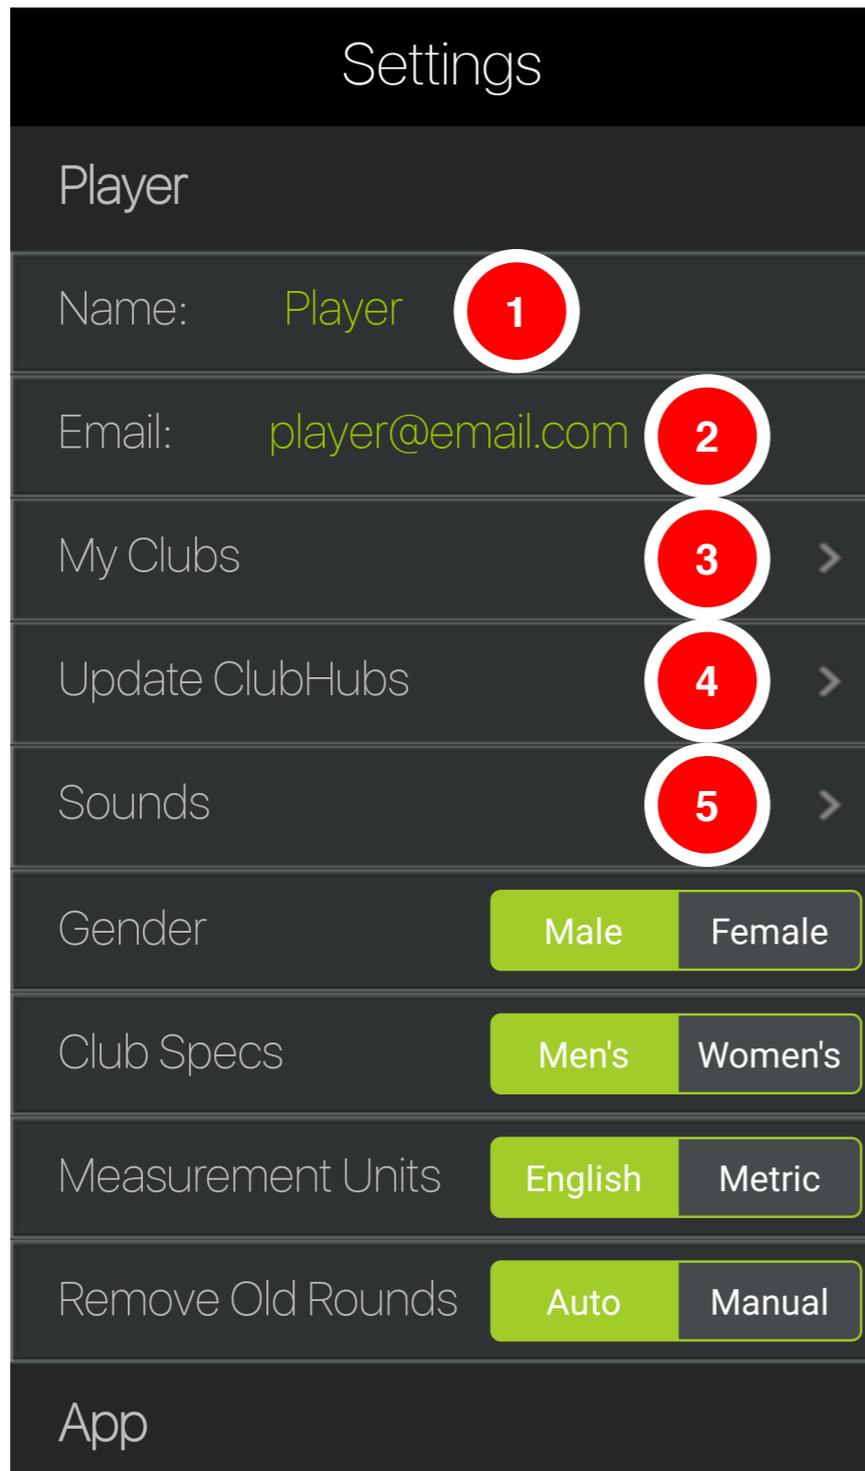


Settings

- 1 Tap **Name** to edit player name.
- 2 Tap **Email** to edit player email.
- 3 Tap **My Clubs** to change the configuration of your bag (add, delete, or edit a club) after initial setup.
- 4 Tap **Update ClubHubs** to see the firmware version of the ClubHub sensors. A red dot indicates an update is available.
- 5 Tap **Sounds** to control audio capability while using ClubHub sensors.
- 6 Select **Auto** or **Manual** in Remove Old Rounds to allow automatic or manual deletion of round data from the phone to limit storage used by ClubHub app.

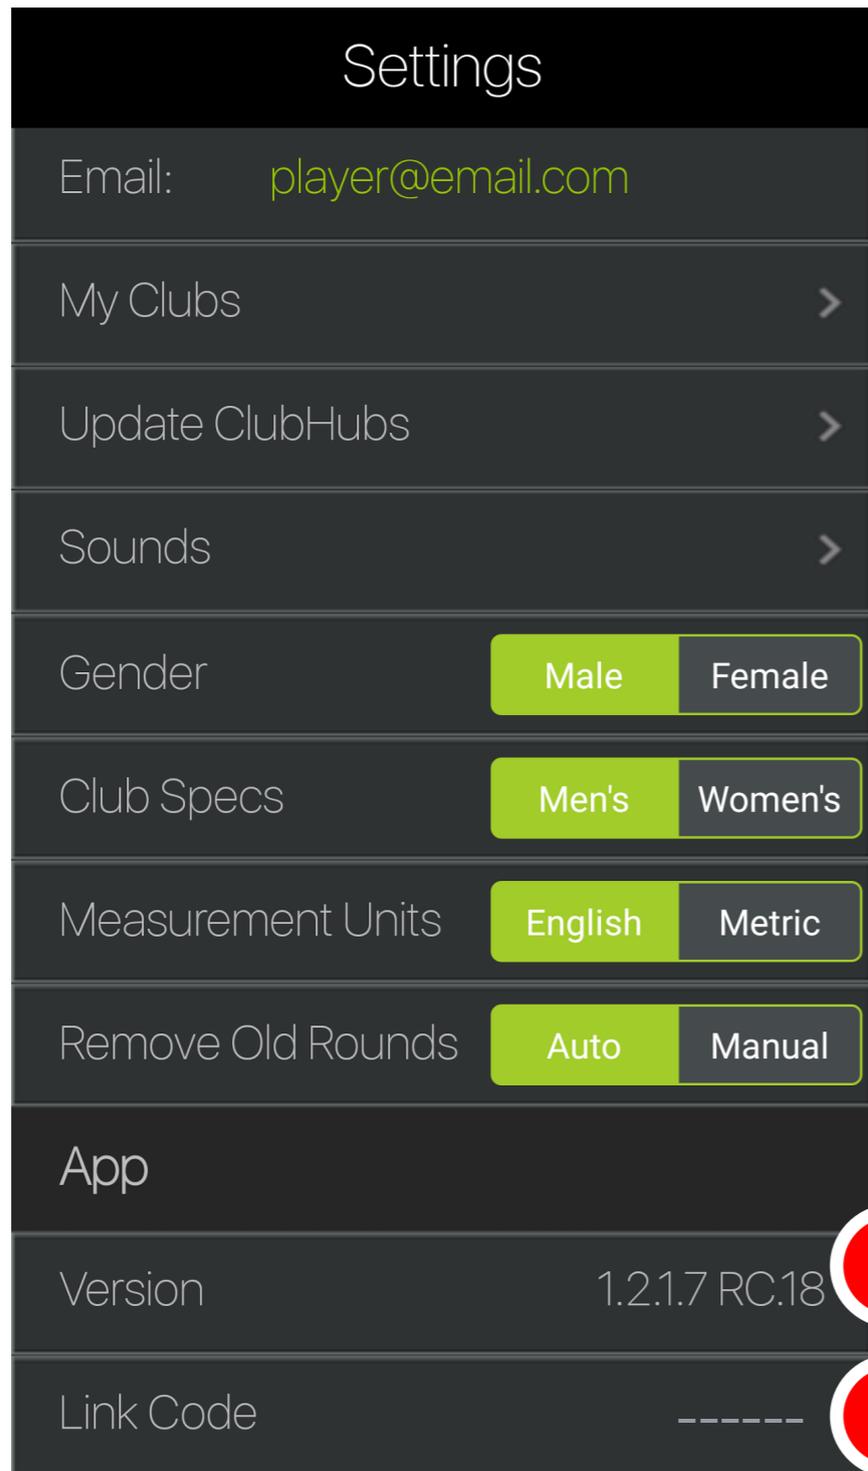

Settings

- 1 Version displays the current version of the app.
- 2 Link Code displays the code that was assigned when you created your player during the initial app setup. This code can be used to sync your ClubHub data on other devices by selecting **Existing Player**.

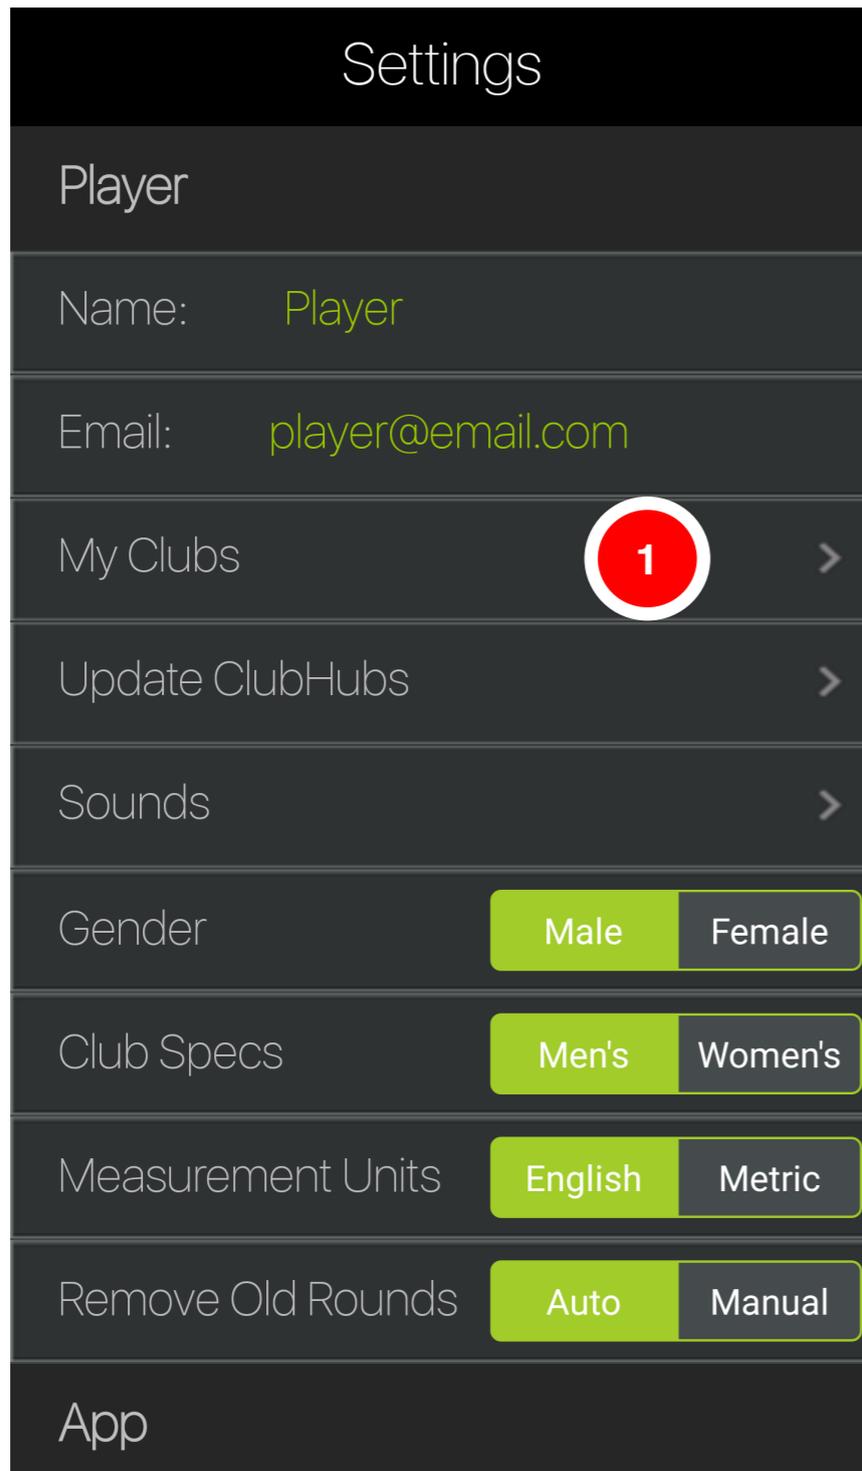

My Clubs

- View or Change -

- 1 Tap **My Clubs** to change the configuration of your bag (add, delete, or edit a club) after initial setup.

My Clubs		+
 8 Iron Callaway	90%	 >
 9 Iron Callaway	78%	 >
 AW Taylor Made	98%	 >
 SW Callaway	69%	 >
 56° Taylor Made	100%	 >
 60° Ping	95%	 >
 Putter -/-	98%	 >
 2 Hybrid -/-		>
 3 Hybrid -/-		>
 5 Iron -/-		>
 PW -/-		>



My Clubs

- 1 Tap + to add a new club.
- 2 Tap a row in the list to display the club configuration page for that club.

i Clubs with and without ClubHubs attached can be edited.

My Clubs

- Remove/Delete -

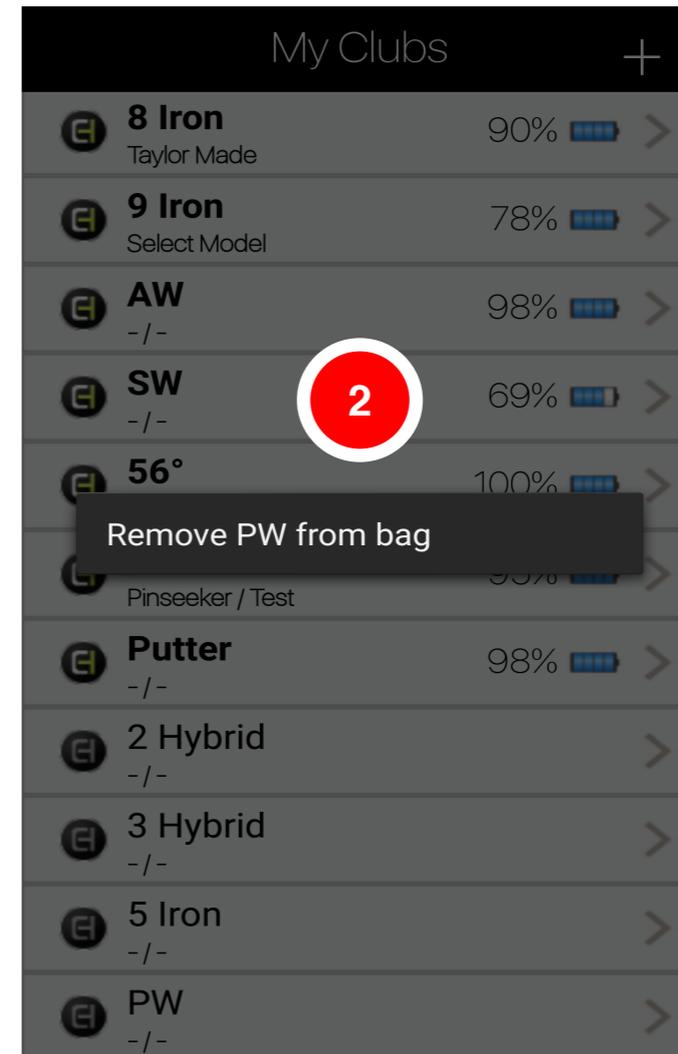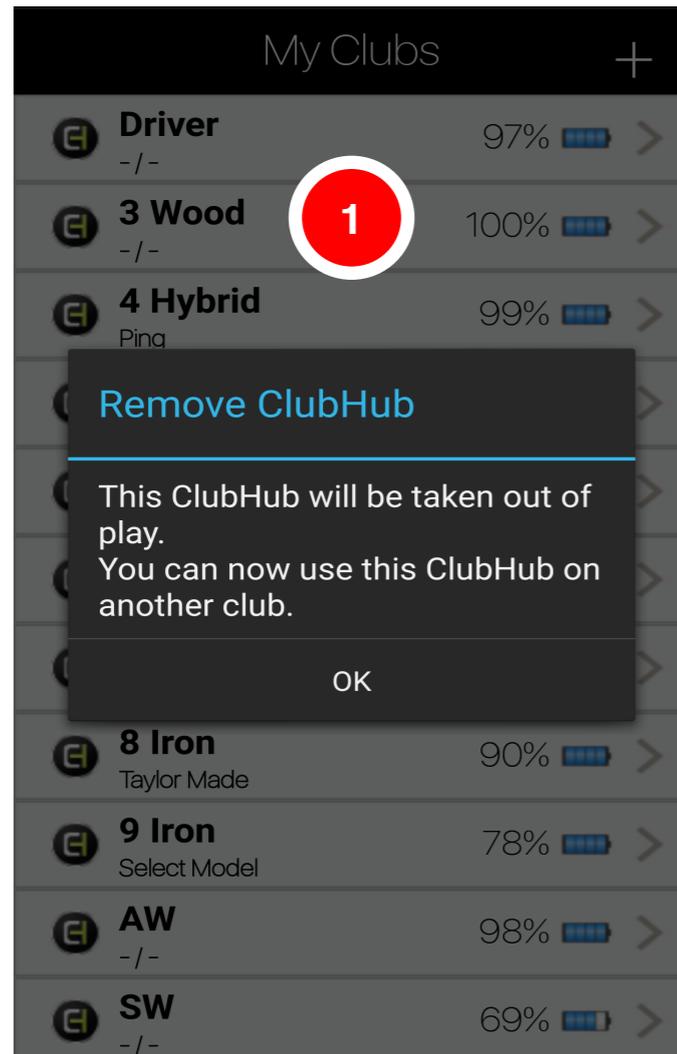

- 1 Tap and hold a row to **Remove ClubHub** sensor from a club. Removed clubs will appear at the bottom of the My Clubs list with a gray ClubHub icon.
- 2 Tap and hold on a row of a club with no ClubHub sensor attached to **Delete** permanently from My Clubs.



My Clubs

- Add Club Without Detail-

- 1 Tap **SAVE** to save the new club. Failure to do so will result in loss of information that was previously entered.
- 2 Tap ^ to show more details. See next page.

3 Iron

Manufacturer:

Club Specs:

Status: **Connected!** 2

Model:

Shaft Type: Graphite Steel

Shaft Flex:

Shaft Length: 38.8


ClubHub Battery: 100% 

1

My Clubs

- Add Club With Details -

- 1 Tap **SAVE** to save the new club. Failure to do so will result in loss of information that was previously entered.
- 2 Tap **v** to hide details.

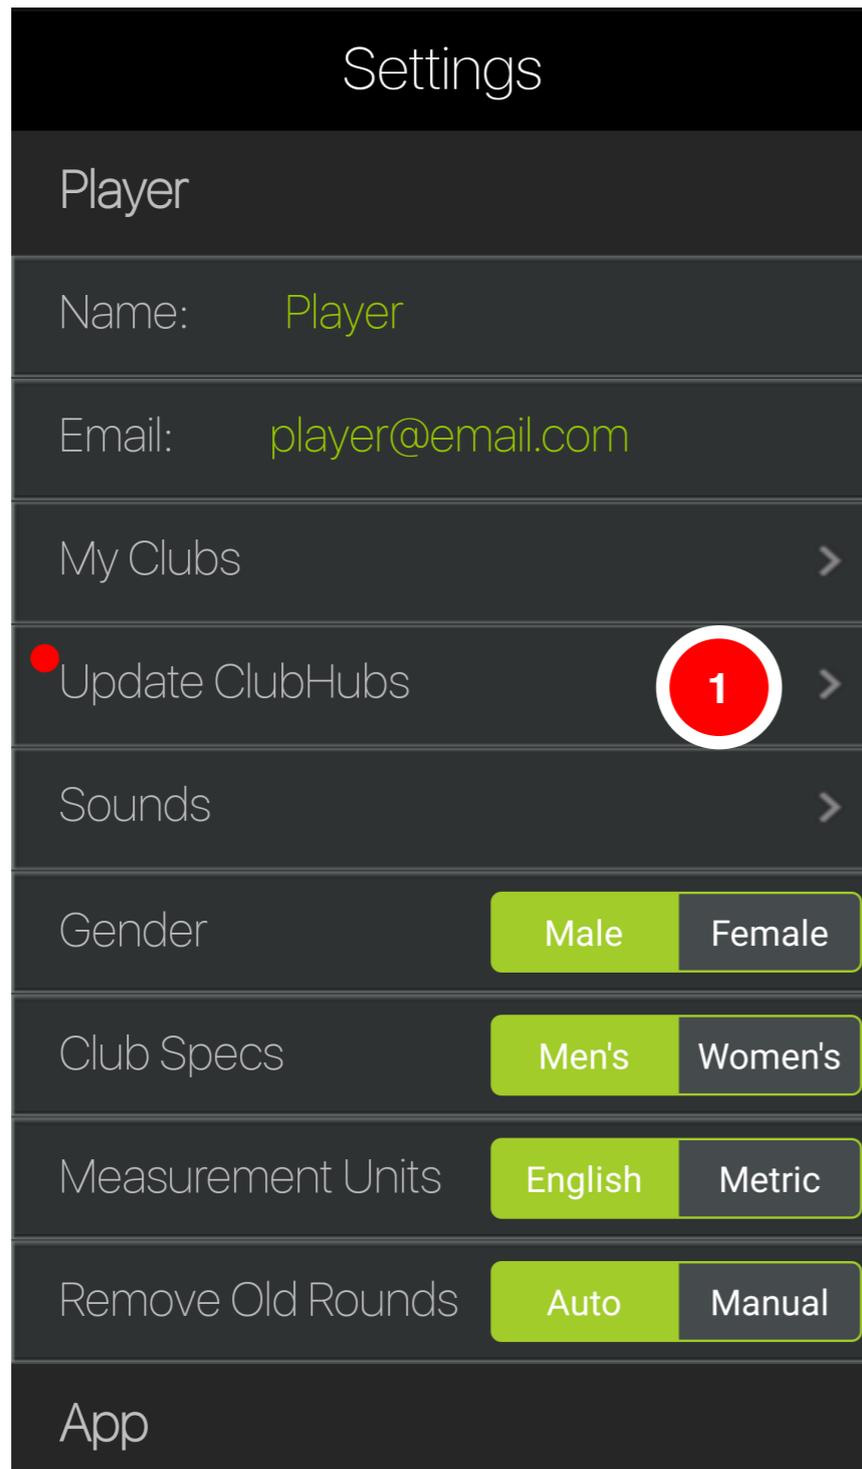


Update ClubHub Firmware

1 Tap **Update ClubHubs** to update the ClubHub sensor firmware.

i A firmware update is available only when a red dot appears above the settings icon on the Home screen and the Update ClubHubs row within Settings.

Update ClubHubs

Update ClubHubs		
77%		No update needed
3 Wood		v4.25
100%		No update needed
2 Hybrid		v4.25
97%		No update needed
3 Iron		v4.23
100%	Updating:	
SW		v4.23
100%		Waiting for update...
Putter		v4.25
94%		No update needed
5 Iron		v4.25
64%		No update needed

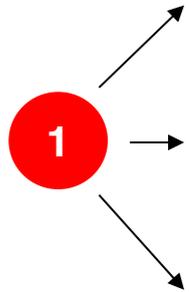

1 Each club associated with a ClubHub displays the club name, last recorded battery level and firmware version.

2 If the firmware is up to date, the version appears in green. "No update needed" appears below the version.

3 If the firmware is updating, the version appears in red. "Updating" appears below the version.

4 If an update is available, the version appears in red. "Waiting for update..." appears below the version.

i Only one ClubHub can be updated at a time.

i To update the ClubHub firmware, take a club from your bag and put the club in play (club head down/grip up). The app will begin the update process automatically within a few seconds.

Sounds

Unlocked Screen Sounds



Locked Screen Sounds



You can choose to have ClubHub feedback sounds ON or OFF when your phone screen is unlocked or locked for both Play Round and Range modes.


Sounds

- 1 Tap the toggle switch to turn Unlocked Screen Sounds ON (green) or OFF (black).
- 2 Tap the toggle switch to turn Locked Screen Sounds ON (green) or OFF (black).

Play Round Mode

The screenshot displays the CLUBHUB mobile application interface. At the top, there is a navigation bar with a refresh icon, the text "CLUBHUB", and a settings gear icon. Below this is a player profile section featuring a circular icon with a stylized "E" and the word "Player". The statistics section is divided into four cards: "Last Played: 5/26/17" with a course name "North - Oaks North G...", "Rounds Played: 11", "Longest Drive: 260 yards", and "Average Driver Speed: 105 mph". At the bottom, there are two buttons: "PLAY ROUND" (highlighted with a red border) and "RANGE". A "TRACK PERFORMANCE" button is located at the very bottom of the screen.

Stat	Value
Last Played	5/26/17
Course	North - Oaks North G...
Rounds Played	11
Longest Drive	260 yards
Average Driver Speed	105 mph

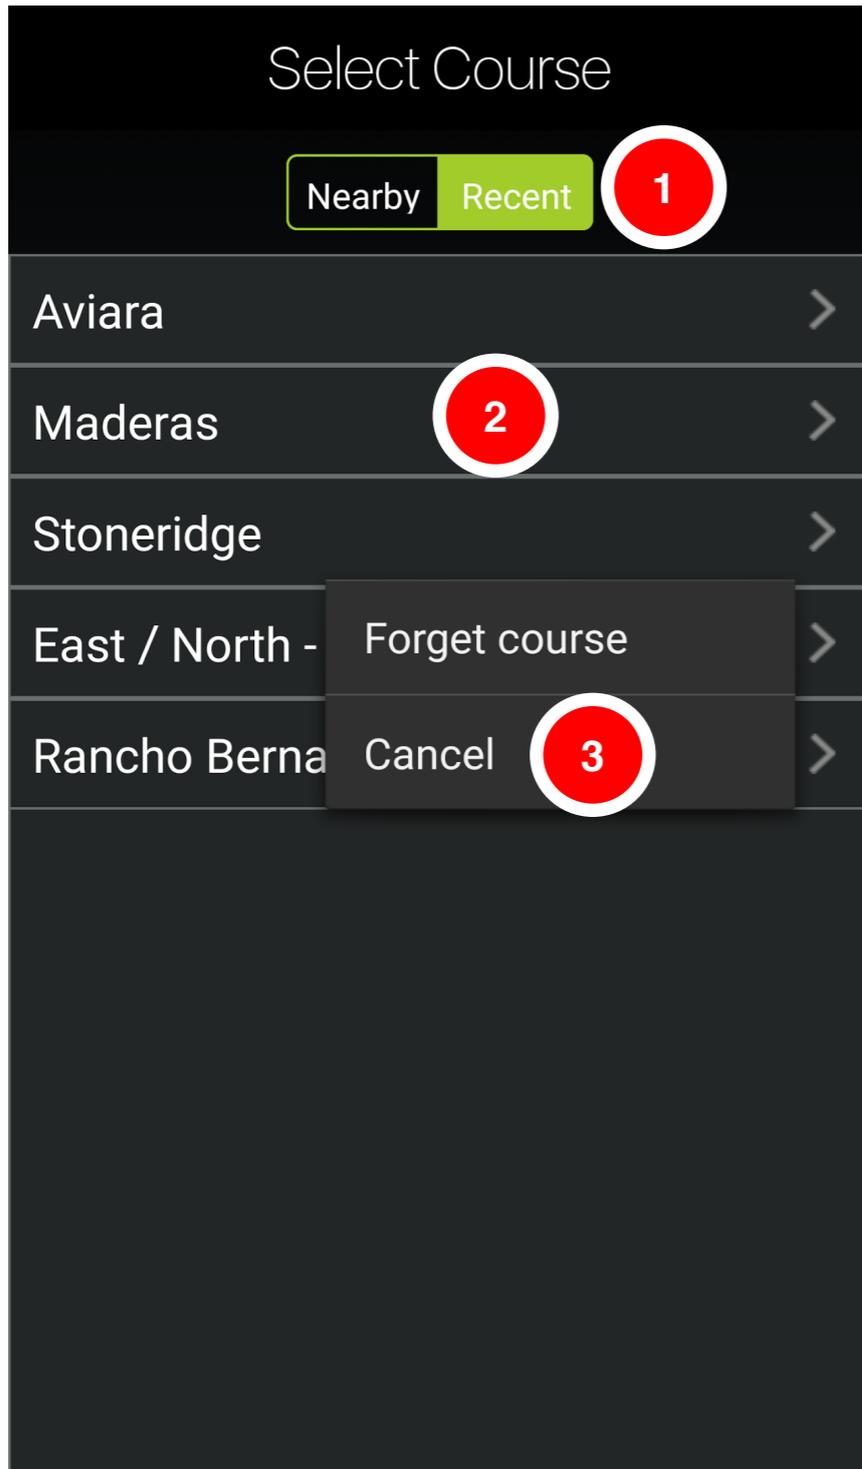


Play Round - Select Course -

- 1 Tap **Nearby** or **Recent** to select a nearby course or a course previously played.
- 2 Select the desired course.
- 3 Tap and hold a course name to **Forget course** for a recent entry.
- 4 Select **Unknown Course** to play a round where no course map is available.

i For Nearby courses, the list is ordered closest to farthest from your current location within a 15 mile radius.

i For Recent courses, the list is comprised of the 10 most recently played courses listed in order of most recent to least recent.


i Unknown Course appears at the end of the Nearby course list.

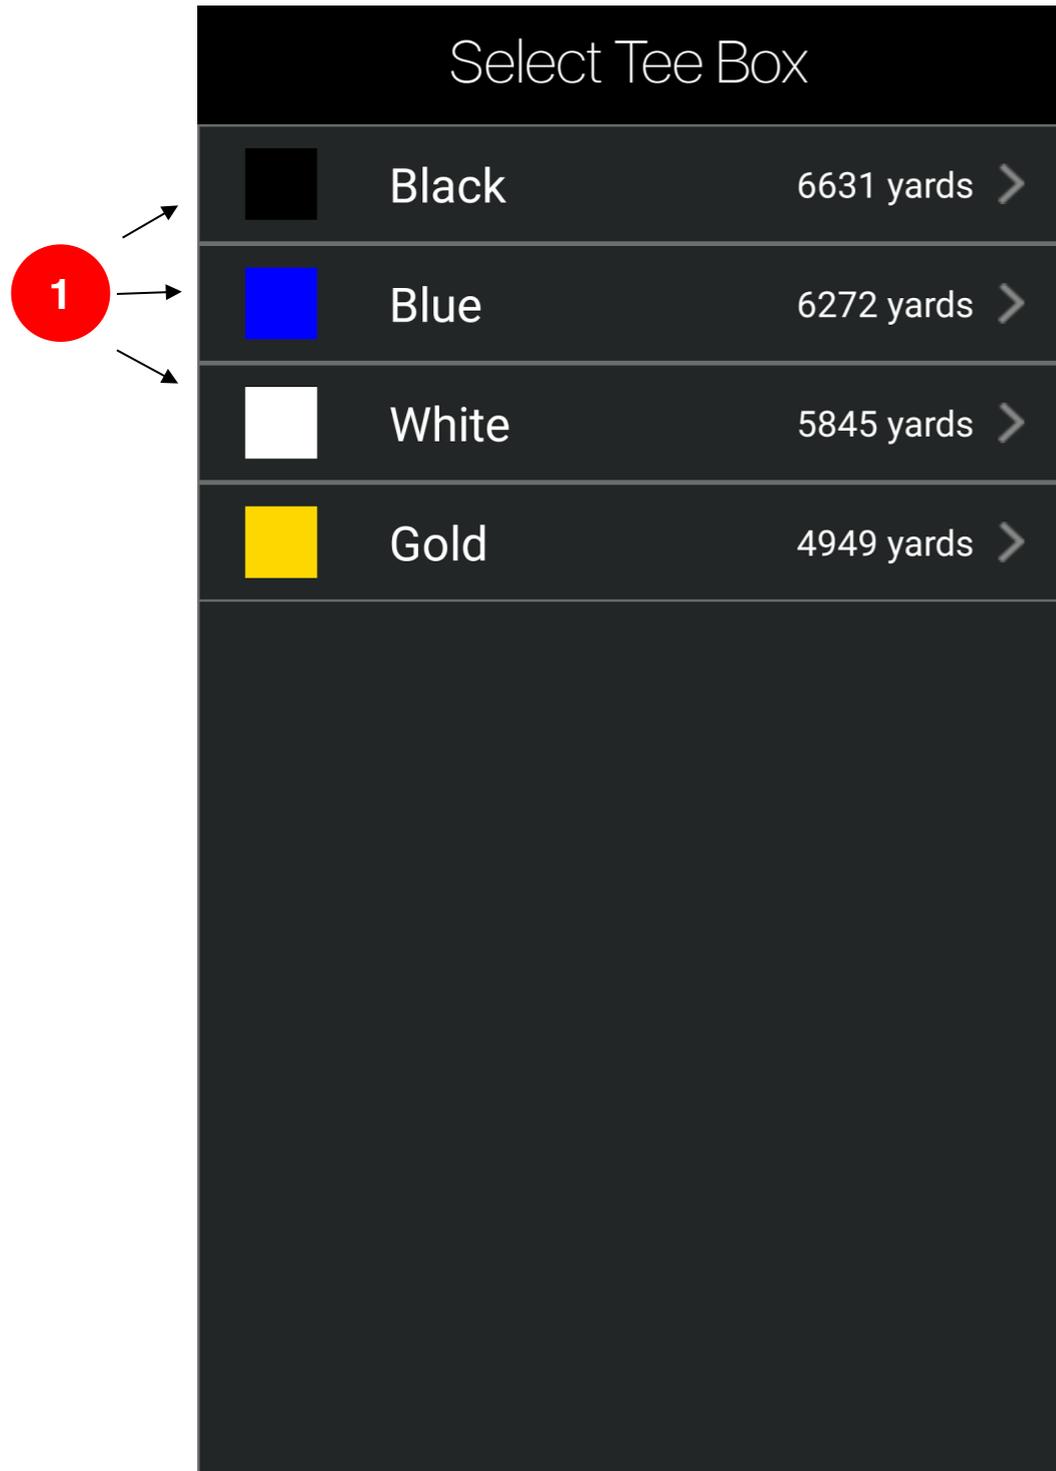

Play Round - Select Tee Box -

1 Select a tee box.

i Once a tee box is selected, the Play Round screen is automatically displayed.

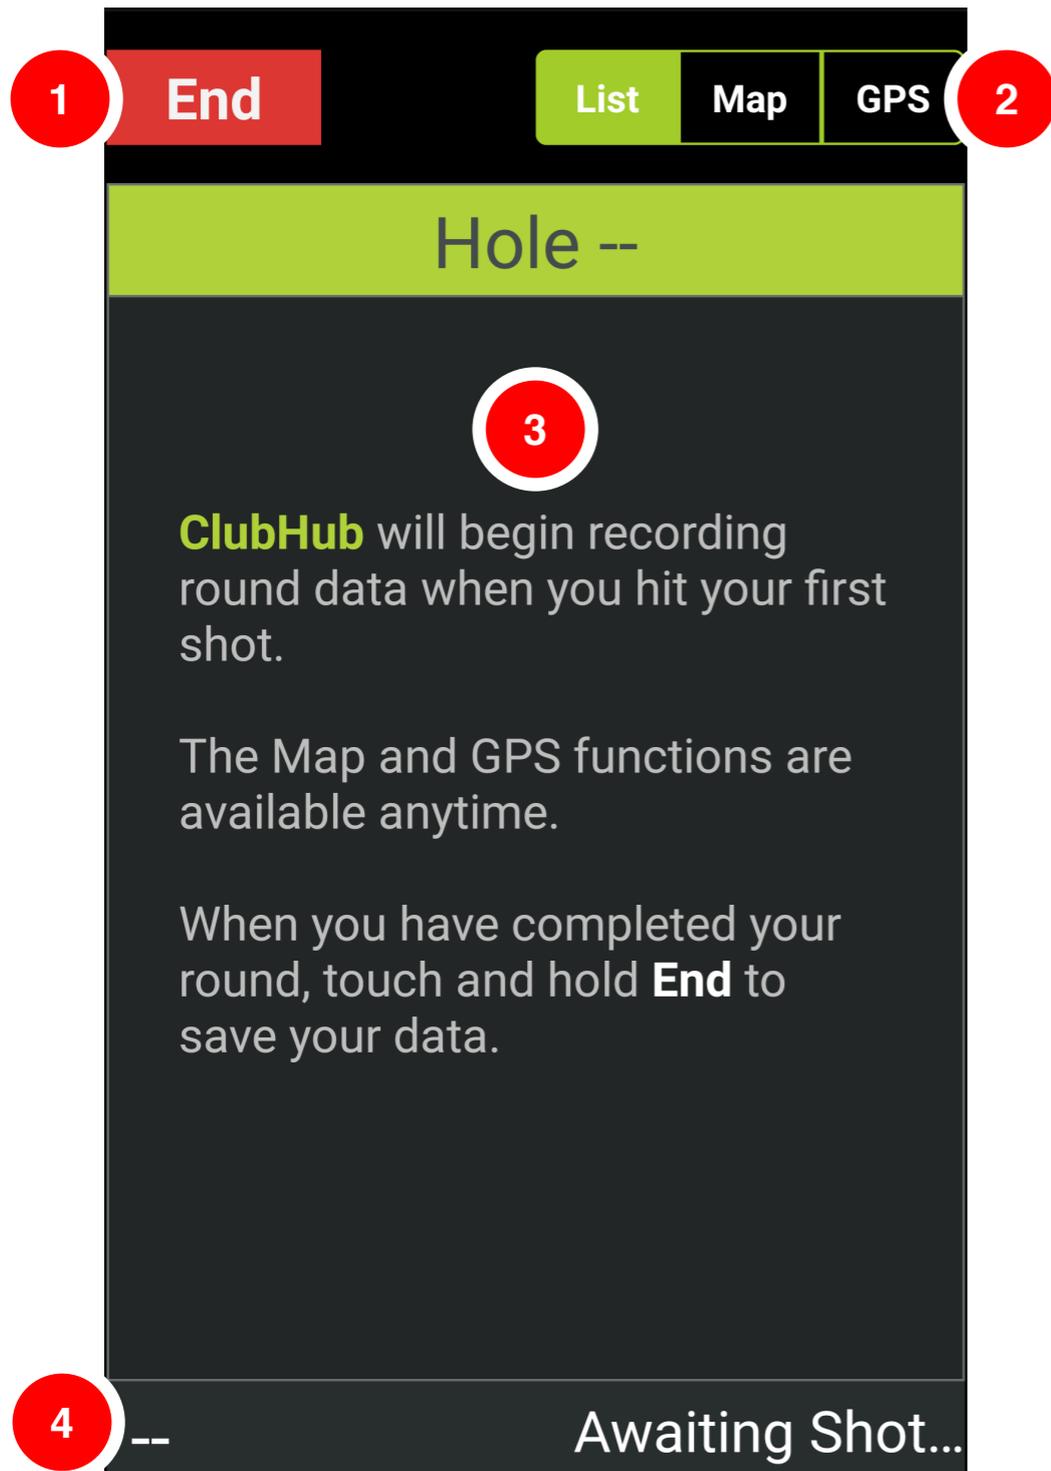

Play Round - List No Shots -


- 1 Long press (tap and hold) **End** to complete a round. Long press prevents inadvertent ending of the round.
- 2 Navigation menu to switch between shot **List**, **Map** or **GPS** views.
- 3 Informational message displayed until a shot is detected.
- 4 Current club in play is displayed here. Changes to '—' if no club is in play.

i GPS view is not available for an Unknown Course. In this case GPS label appears but is disabled.

i Whenever clubs come in/out of play or a swing is detected, the app plays unique audible tones, which can be turned on/off in Settings.

Play Round

- Map No Shots -

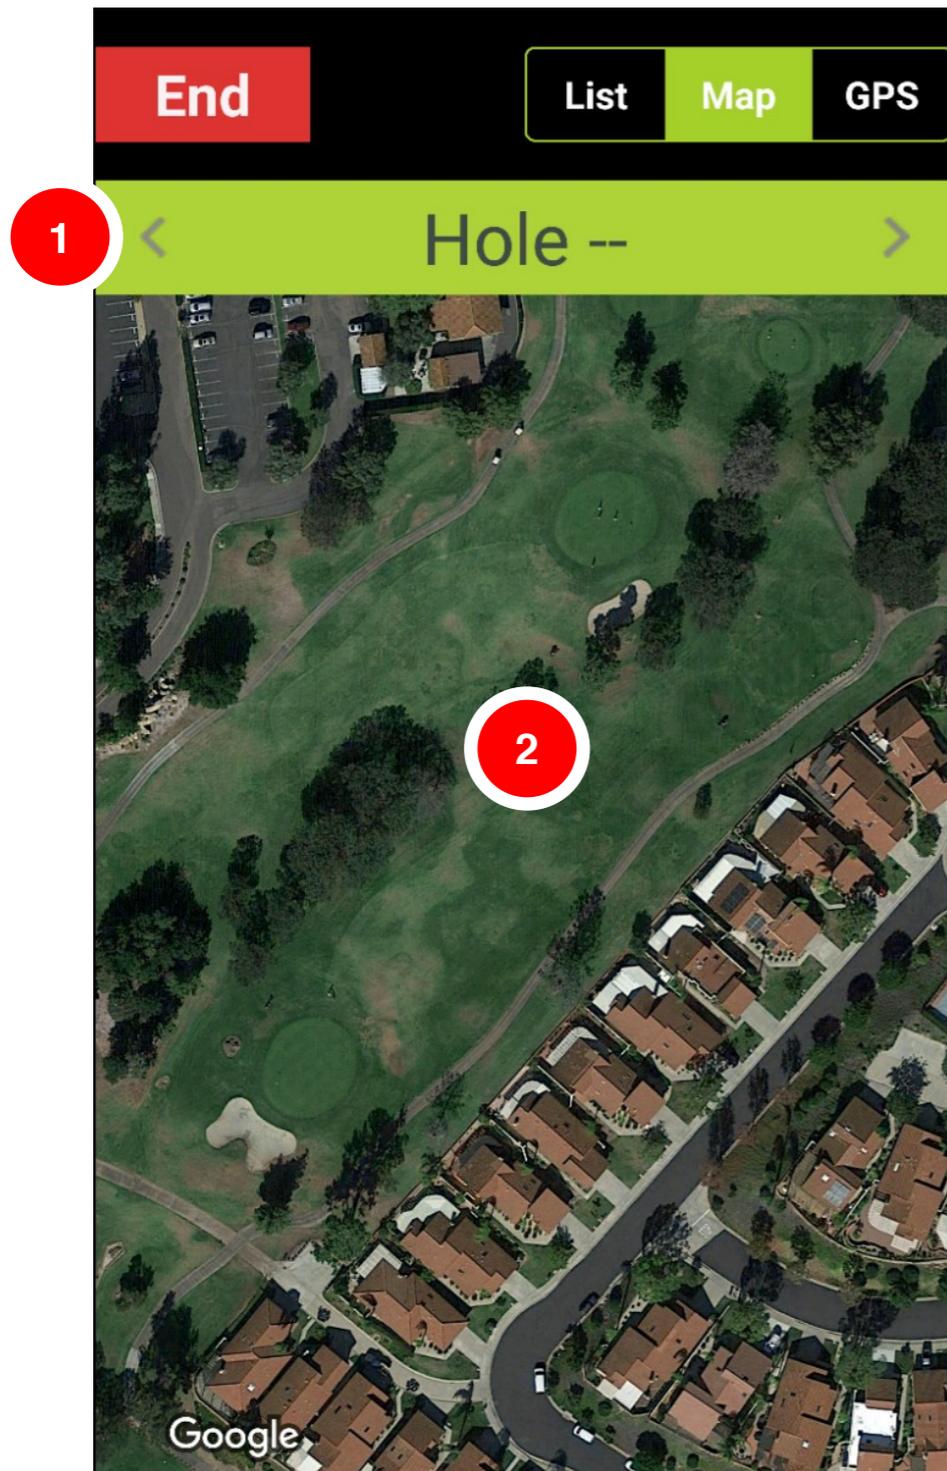

- 1 Tap < > to navigate from hole to hole once shots have been recorded.
- 2 On a mapped course, the map displays the first hole on the course. For an Unknown Course, the map displays the area around your current location.

i This screen shows the default map view presented when a round is started, but no shots have been recorded.

i Zoom in/out and pan the map through the standard Android gestures.


i If desired course is not found, go to the ClubHub website to search Course Listing.

Play Round

- GPS No Shots -



- 1 The par for the hole and the distance from the selected tee box to the green based on the scorecard.
- 2 The Front, Middle and Back values display the distances from the current GPS location to the front, middle and back locations of the green. These distances will constantly be updated to reflect current distances to the hole.
- 3 Tap the flag to display a list of all the holes on the course. The hole displayed is based on current location of player. To change to a different hole, use the flag button.
- 4 Touch and drag the white target symbol to see distances to the object of interest, e.g. a sand bunker or water.

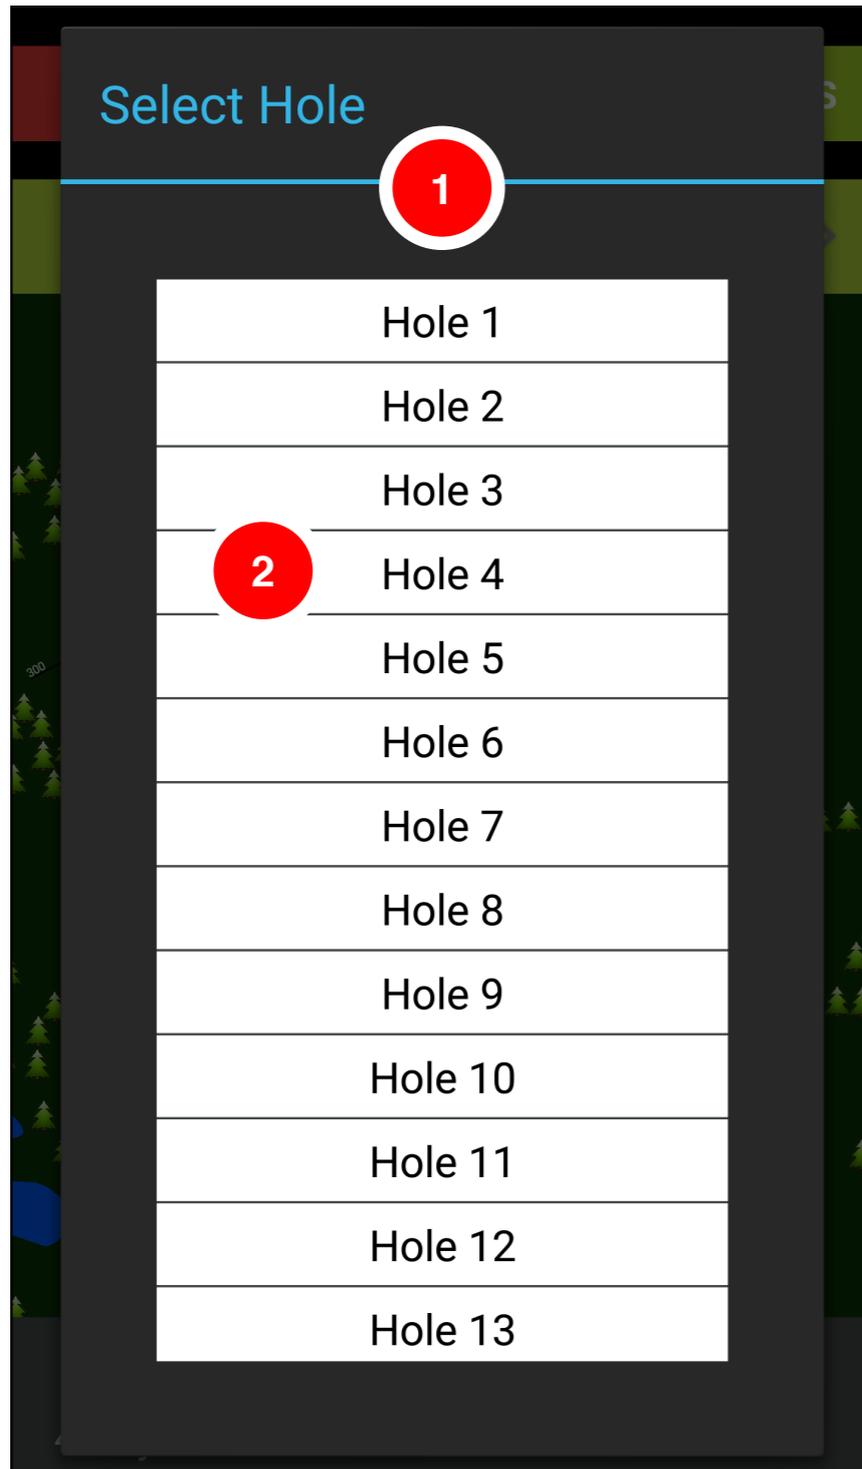


Play Round - GPS Change Holes-

- 1 The list of available holes.
- 2 Tap a list entry to select a hole and the overlay will automatically be dismissed.

i This overlay appears whenever the flag is tapped on the GPS screen, allowing to switch holes manually in the GPS view.


Play Round

- List With Shots -

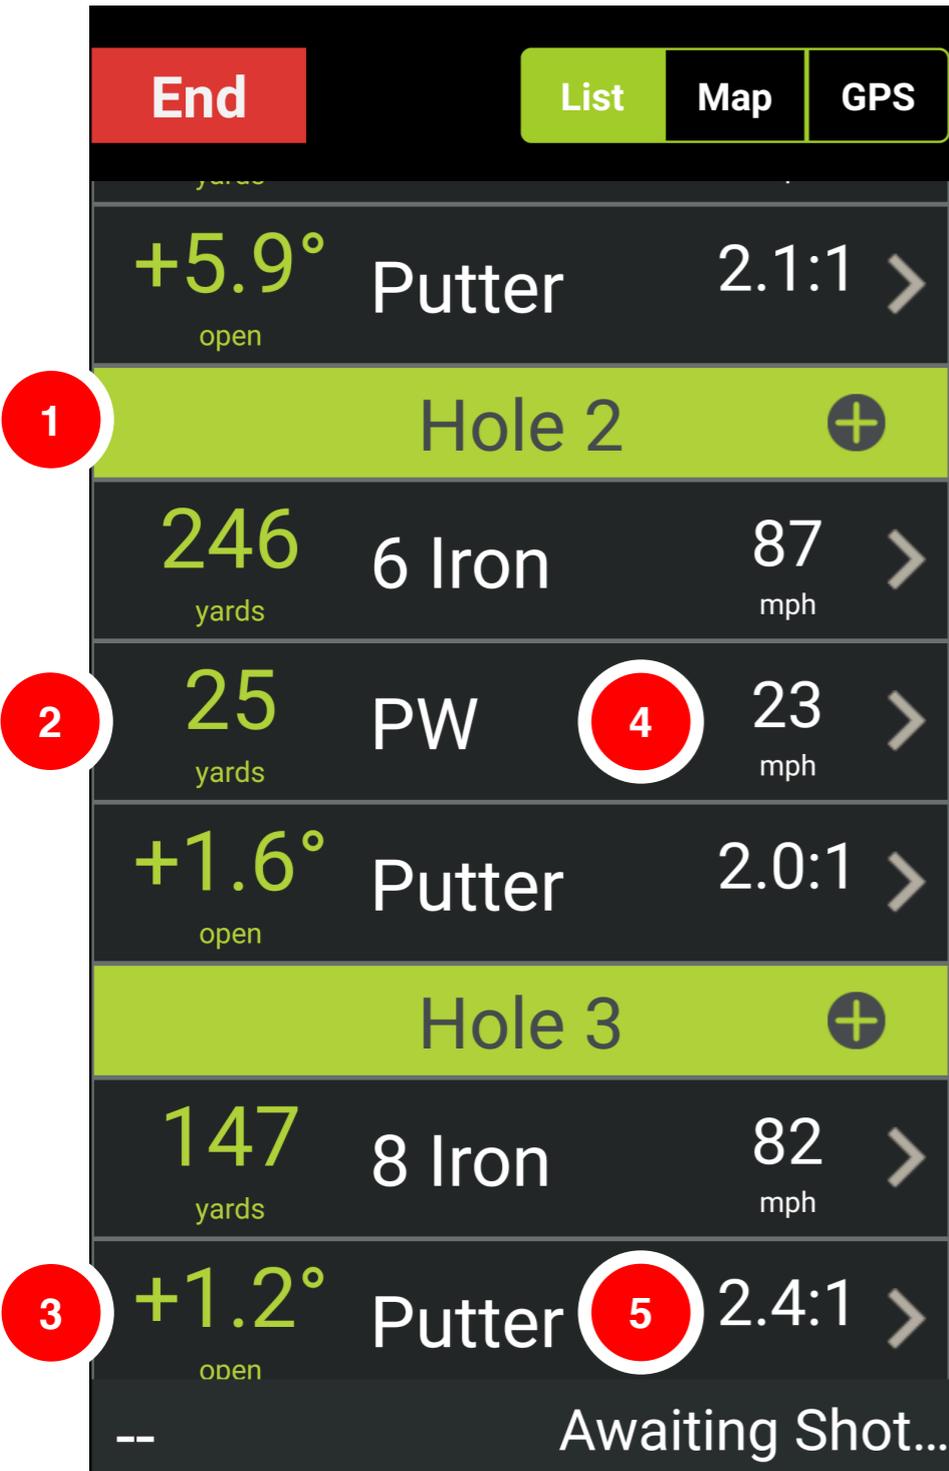

- 1 Banner identifying the hole to which the following shots were assigned. Holes are listed in the order they were played.
- 2 Non-putter swing entry displaying distance, club name and swing speed.
- 3 Putter swing entry displaying face angle, putter name and tempo.
- 4 Tap a swing to display the Shot Detail. See next page.
- 5 Tap and hold a shot row to **Delete** the swing.

i For an Unknown course, shots start at hole #1 and the first non-putter shot after a putter shot starts a new hole.

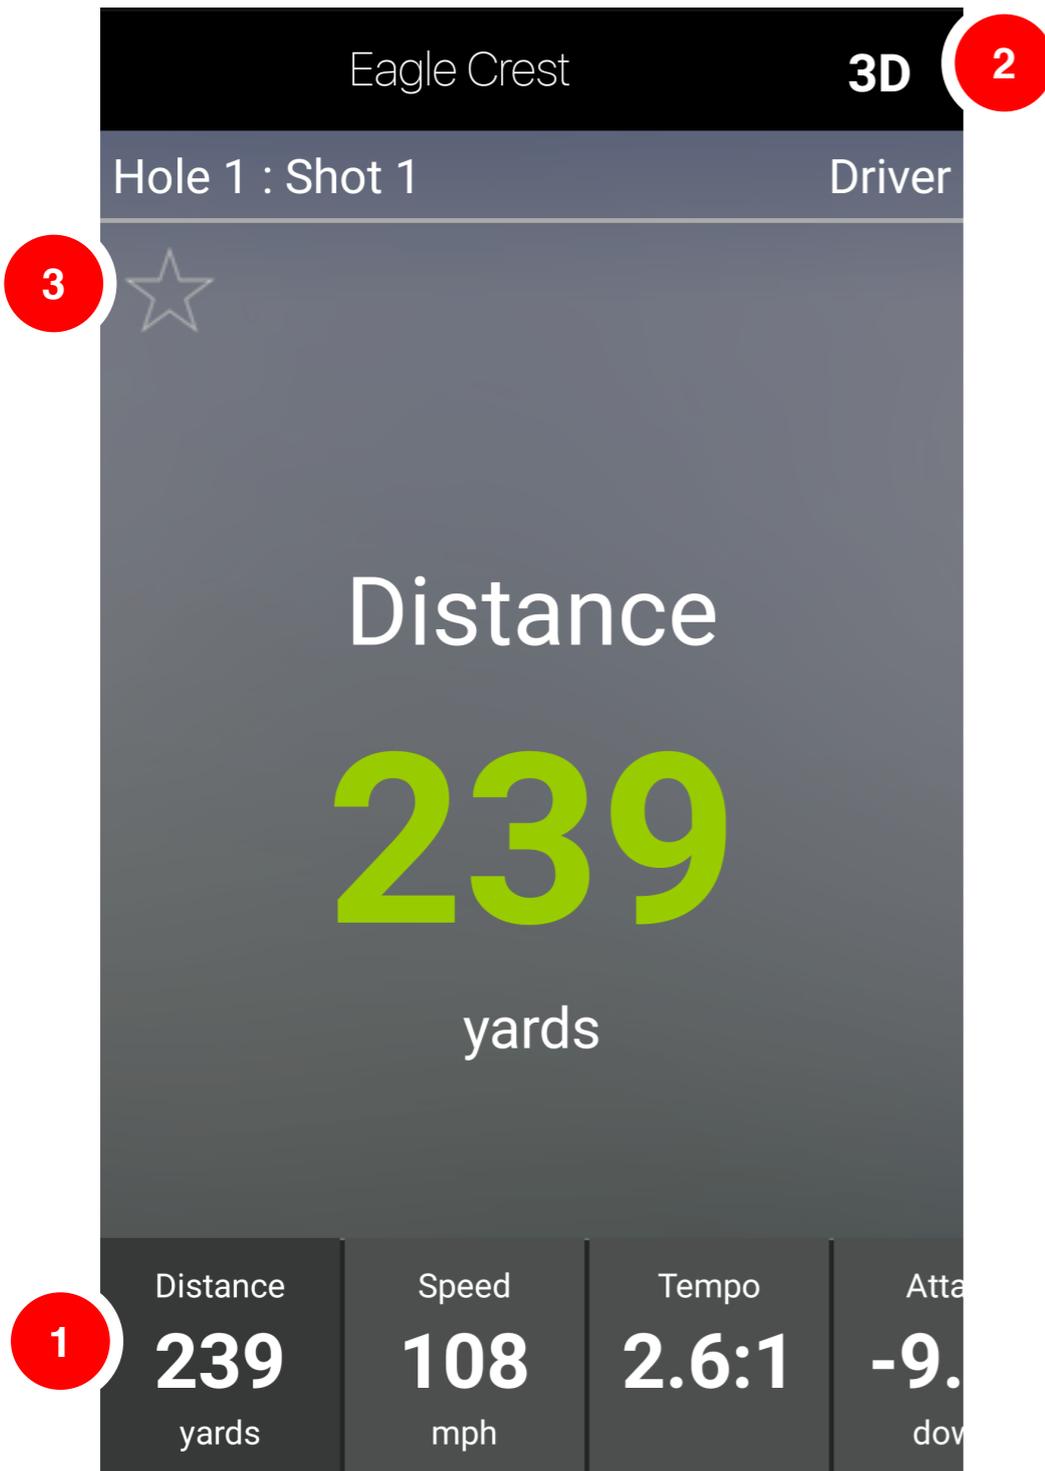


Shot Detail

- 1 Swipe left or right on the list of stats to view more. Tap a stat to change the stat that appears on the main display.
- 2 Tap **3D** to see a 3D view of the swing.
- 3 Tap ☆ to (un)favorite a swing. That shot will be saved/removed in Favorite Shots.

i The list of stats can be reordered. Tap and hold a stat then drag it left or right and drop it into its new position.

3D Shot Detail

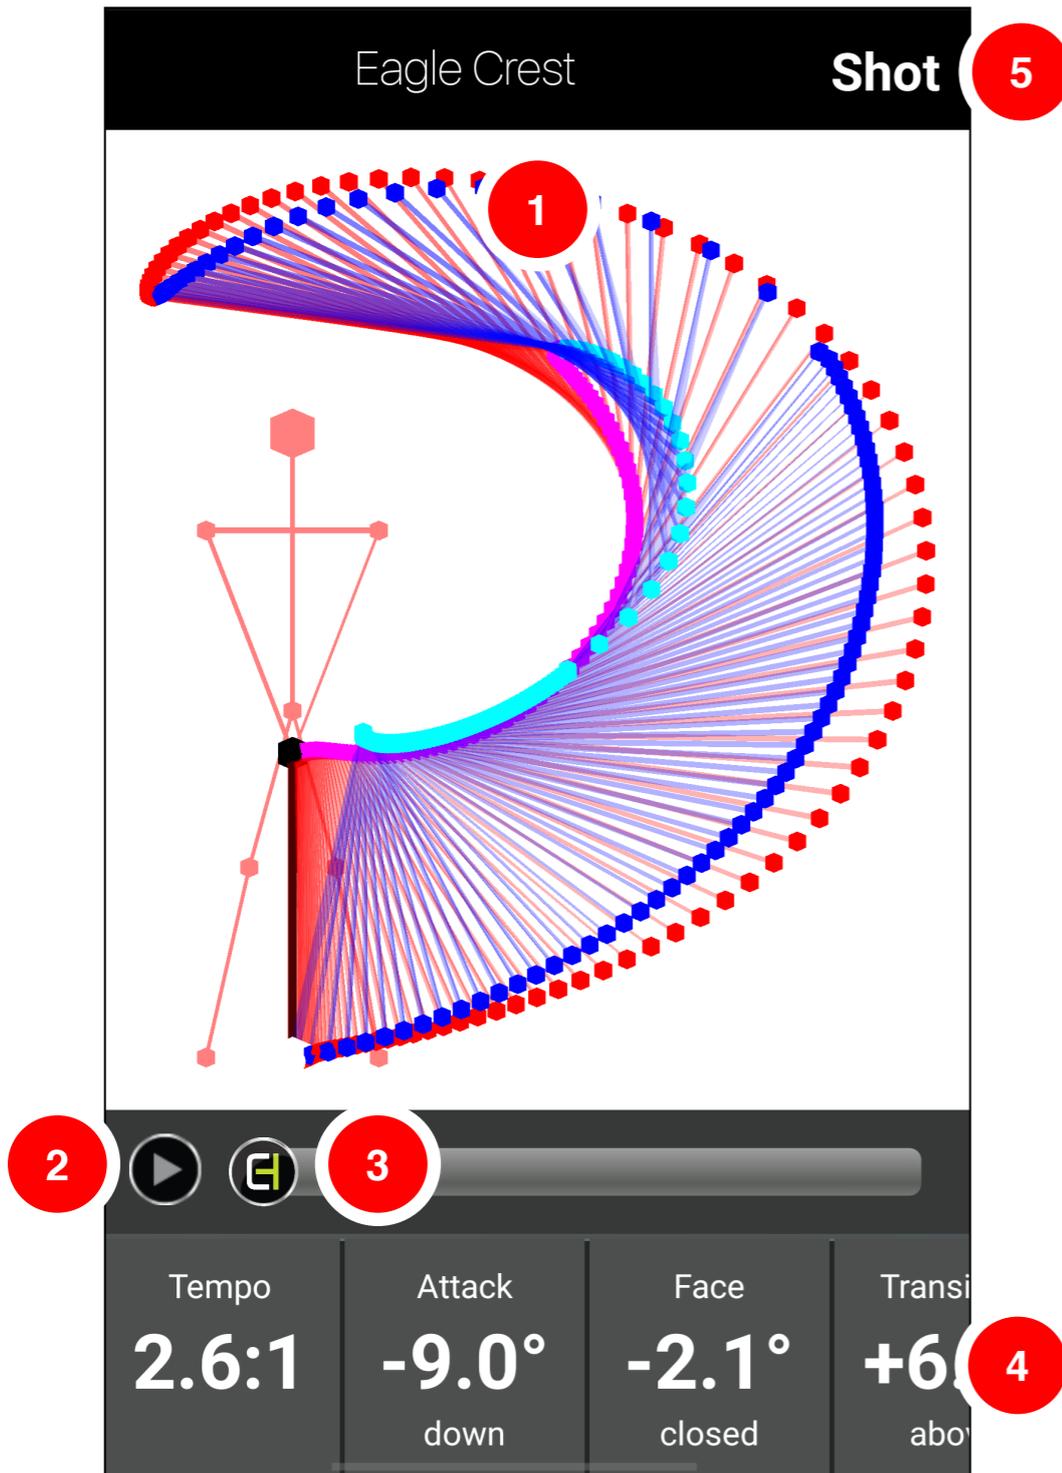

- 1 Drag the image to view the swing from different angles.
- 2 Tap ▶ to start playing the animation.
- 3 Drag the slider to position to a specific frame in the playback sequence.
- 4 Tap and hold a stat then drag it left or right and drop it into its new position to reorder stats.
- 5 Tap **Shot** to return to the Shot Detail.

Play Round - Map With Shots -



- 1 Tap < > to change to the previous or next hole.
 - 2 Zoom in/out and pan the map through the standard Android gestures.
 - 3 Scrollable stat bar displays the stats for the currently selected swing with a yellow colored map icon. Stats can be reordered in map view.
 - 4 Club name banner with the club of the currently selected shot. Tap < > to change to the previous or next shot.
- i Tap a shot icon on the map to change the selected shot. The stat bar will update to reflect the selected shot stats.
 - i The map only displays shot annotations for the current hole.
 - i If two shots are recorded in the same location, the latter shot will replace the former shot.


Range Mode

The screenshot displays the CLUBHUB mobile application interface. At the top, there is a navigation bar with a refresh icon, the text "CLUBHUB", and a settings gear icon. Below this is a player profile section featuring a circular icon with a stylized "EH" and the word "Player". The profile is divided into two columns of statistics: "Last Played: 5/26/17" and "Rounds Played: 11" (with "North - Oaks North G..." truncated); "Longest Drive: 260 yards" and "Average Driver Speed: 105 mph". At the bottom, there are two buttons: "PLAY ROUND" and "RANGE", with the "RANGE" button highlighted by a red border. Below the buttons is a "TRACK PERFORMANCE" section.

Stat	Value
Last Played	5/26/17
Rounds Played	11
Longest Drive	260 yards
Average Driver Speed	105 mph

Buttons: PLAY ROUND, RANGE (highlighted), TRACK PERFORMANCE

Range

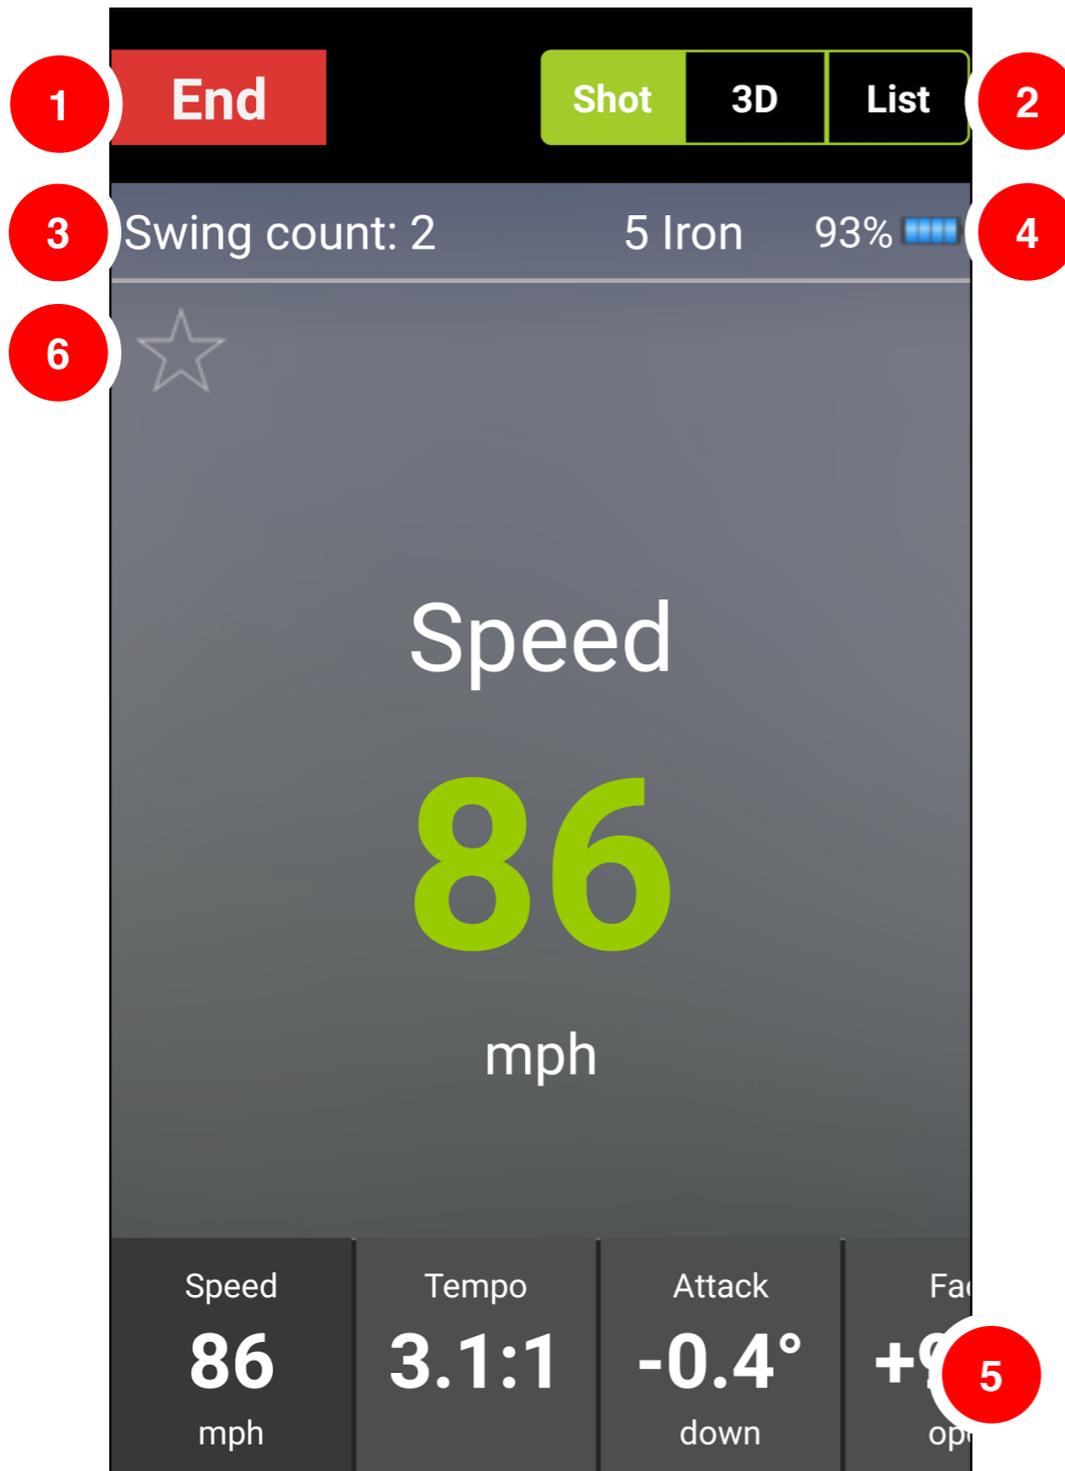

- 1 Tap **End** to close a range session.
 - 2 Tap **Shot**, **3D**, or **List** to view swing parameters, a 3D view of the swing, or an ordered list of swings for the selected session.
 - 3 Swing count is the number of swings recorded for the current club.
 - 4 Club name and battery level indicator for the last club in play.
 - 5 Tap a stat in the scrollable stat bar to change the main display area. To reorder the stats, tap and hold a stat then drag it left or right and drop it into its new position.
 - 6 Tap ☆ to (un)favorite a swing.
- i** Speed will appear as '— —' before the first swing is recorded.


End			
Shot	3D	List	
8 Iron			
SPEED	TEMPO	TRANSITION	
82 mph	2.7:1	-5.0° below	>
81 mph	3.0:1	-4.1° below	>
82 mph	2.9:1	-4.3° below	>
5 Iron			
SPEED	TEMPO	TRANSITION	
90 mph	2.7:1	-4.5° below	>
91 mph	2.7:1	-5.4° below	>
90 mph	3.0:1	-3.1° below	>
3 Wood			

Range - Swing List -

- 1 Tap **List** to view an ordered list of swings for the selected recording.
- 2 Club name banner delineates a sequence of consecutive shots with a club.
- 3 Tap a stat name in the stat header to pop up an overlay listing of all the available stats. Select a different stat viewed in that column to change any of the three displayed stats. See next page.
- 4 Display of the selected stats for a given swing. Tap a row to display the Swing Detail.
- 5 Tap and hold a row to **Delete** a swing.

i Swings are listed chronologically in the order they were recorded.

i The screen automatically updates if a new swing is detected.

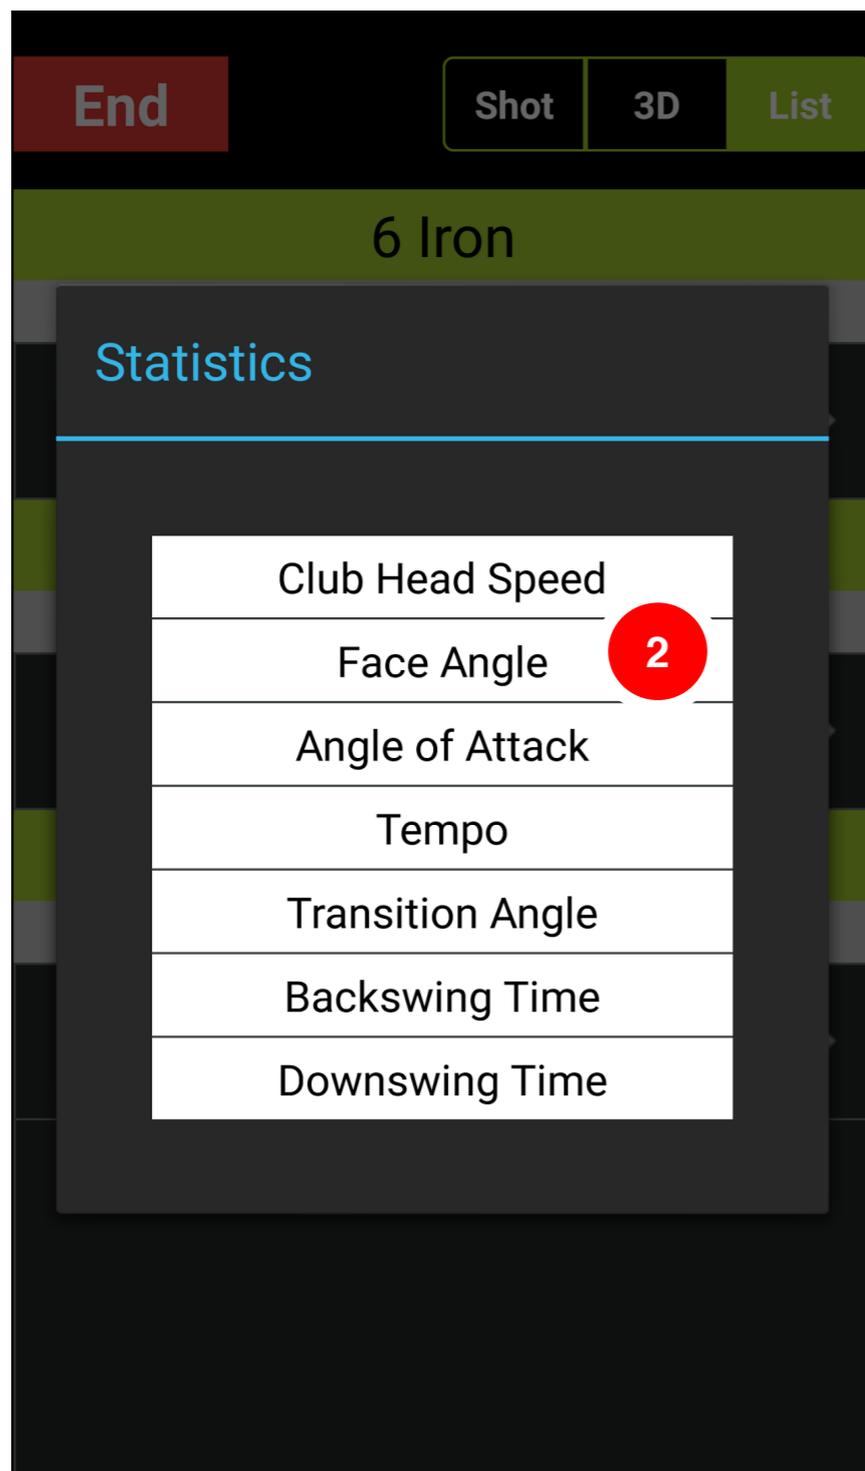

Range - Change Stats -

- 1 Tap on the stat header in List to display this overlay.
- 2 Tap a list entry to select that statistic.

i Available stats are specific to the club type (i.e. putter or non-putter club).


Track Performance

The screenshot shows a mobile application interface for 'CLUBHUB'. At the top, there is a navigation bar with a refresh icon, the text 'CLUBHUB', and a settings gear icon. Below this is a player profile section with a circular icon containing a stylized 'E' and the word 'Player'. The statistics section is divided into four boxes: 'Last Played: 5/26/17' with a sub-label 'North - Oaks North G...', 'Rounds Played: 11', 'Longest Drive: 260 yards', and 'Average Driver Speed: 105 mph'. At the bottom, there are three buttons: 'PLAY ROUND', 'RANGE', and 'TRACK PERFORMANCE', which is highlighted with a red border.

Category	Value
Last Played	5/26/17
Location	North - Oaks North G...
Rounds Played	11
Longest Drive	260 yards
Average Driver Speed	105 mph

Navigation Buttons:


- PLAY ROUND
- RANGE
- TRACK PERFORMANCE**

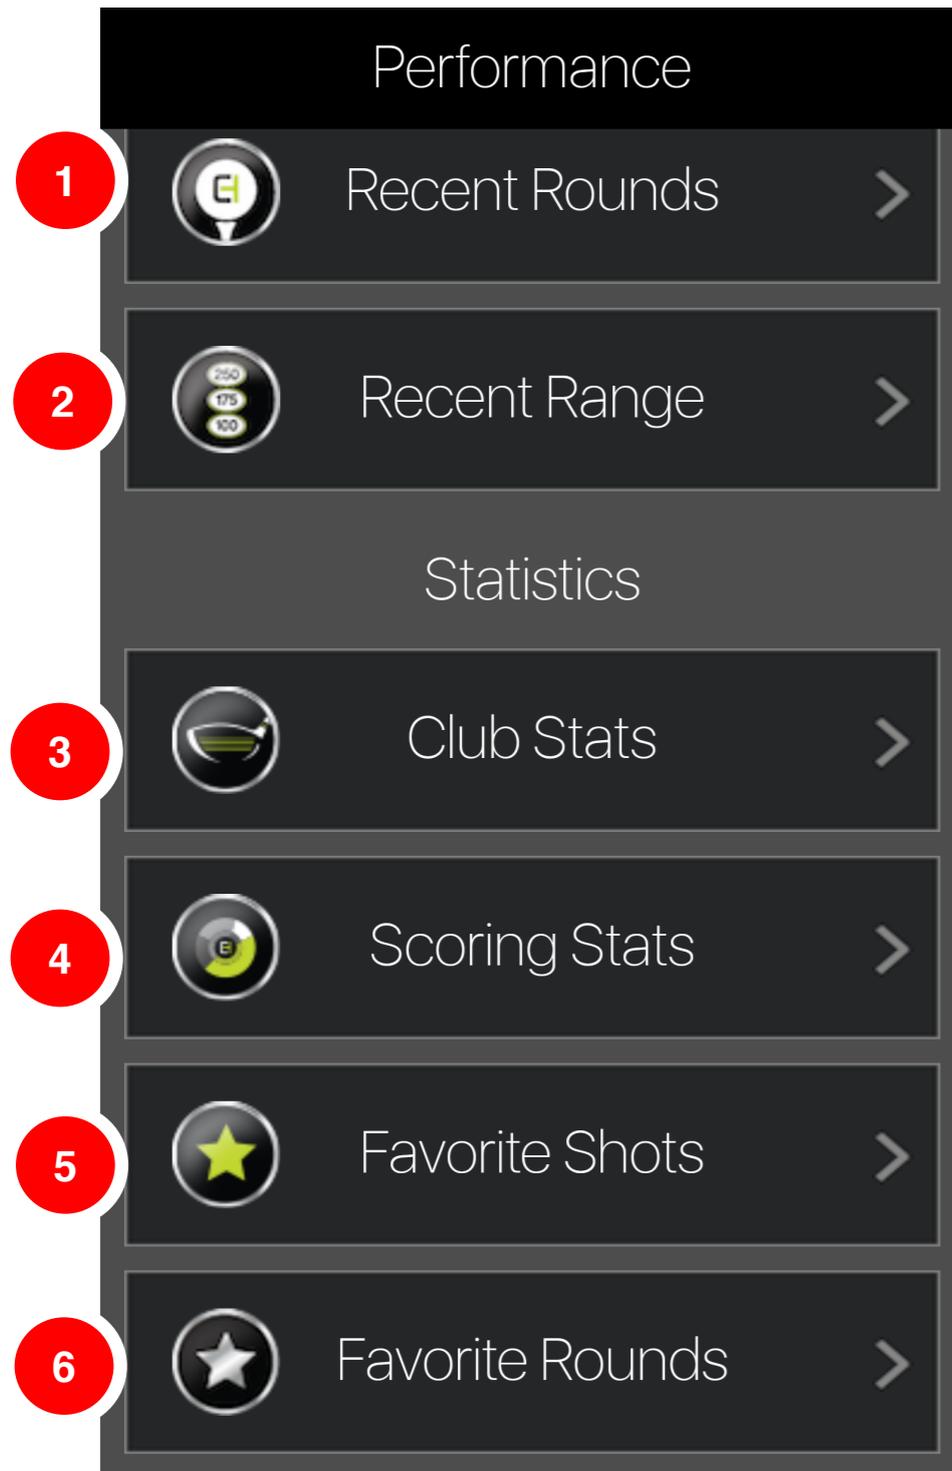


Performance

- 1 Tap **Recent Rounds** to view the list of recently played rounds.
- 2 Tap **Recent Range** to view the list of recently played range sessions.
- 3 Tap **Club Stats** to view stats from rounds and range.
- 4 Tap **Scoring Stats** to view stats for rounds.
- 5 Tap **Favorite Shots** to view club stats for favorited shots from rounds or range.
- 6 Tap **Favorite Rounds** to view the list of favorited rounds.

Track Performance: Recent Rounds

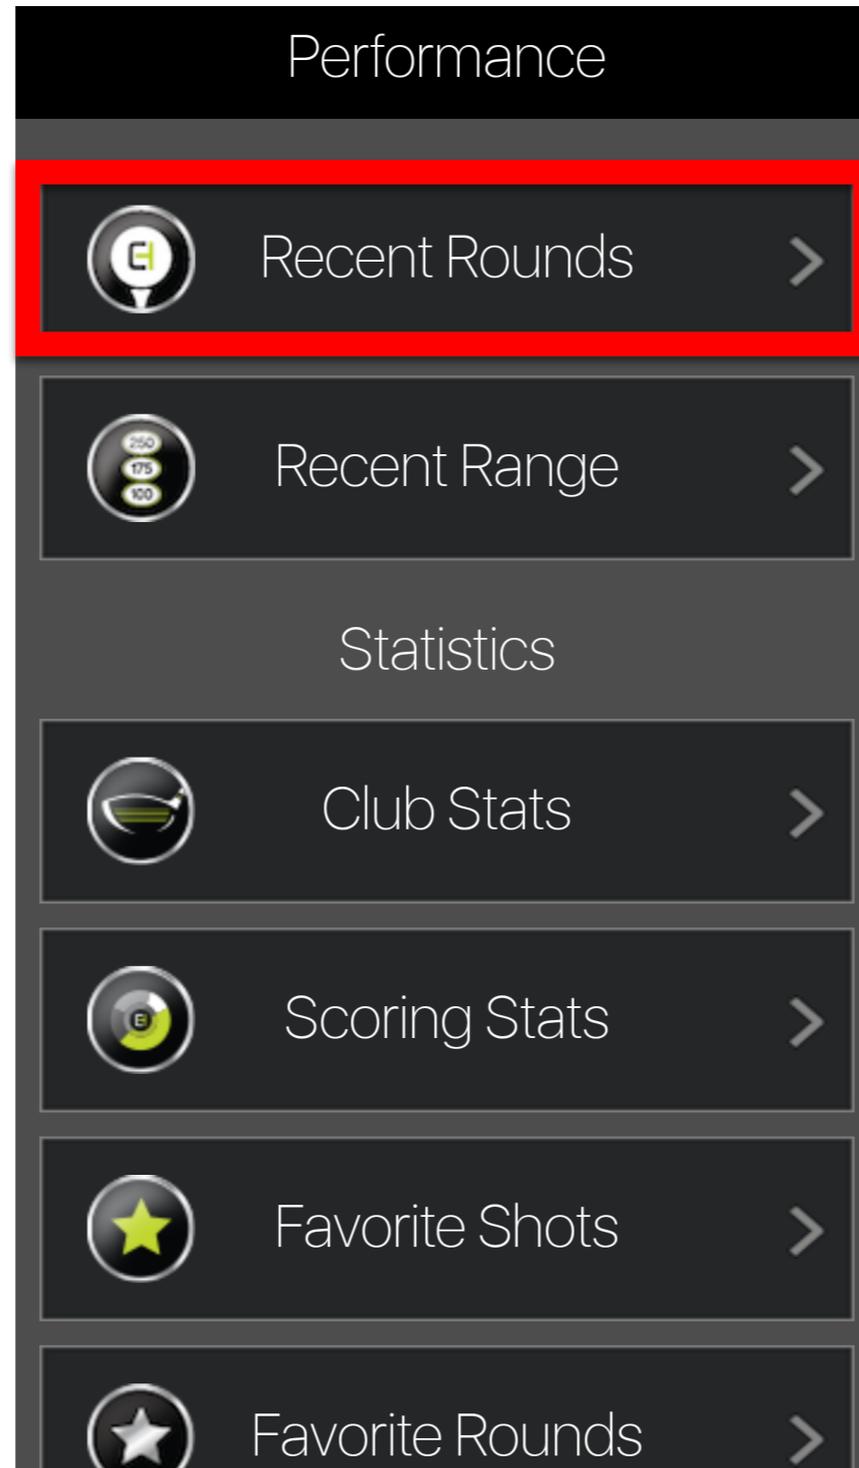


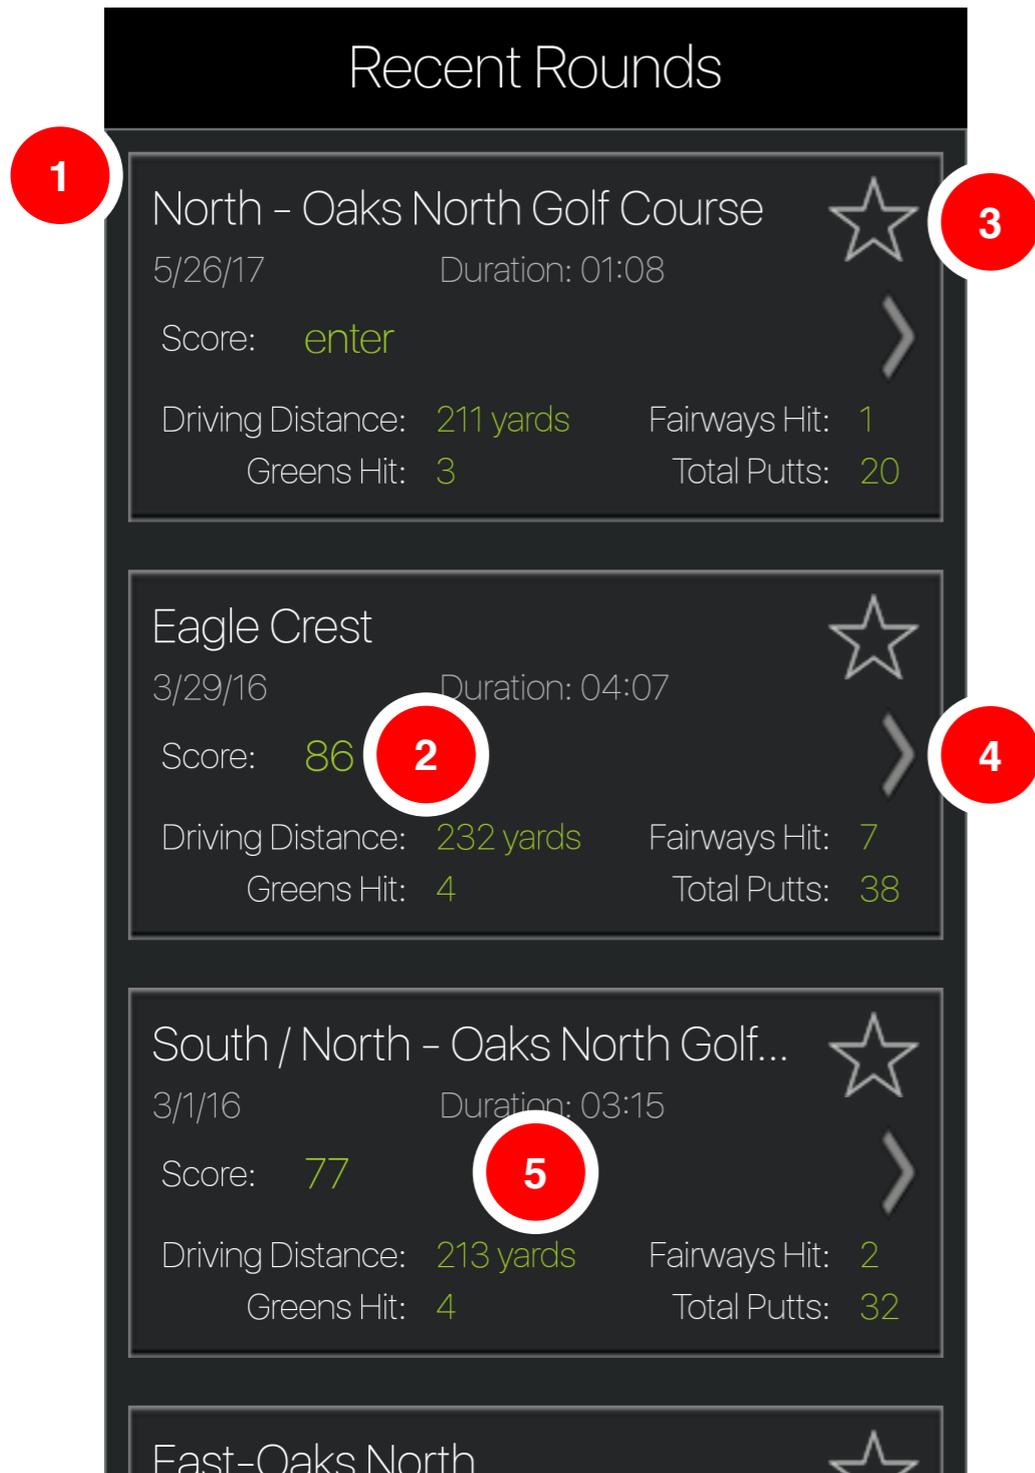

Recent Rounds


- List -

- 1 List of the most recently played rounds in order of newest to oldest.
- 2 The score for the round. Tap the number to change the score.
- 3 Tap ☆ to (un)favorite a recent round.
- 4 Tap a round in the list to view details.
- 5 Tap and hold a row to **Remove** a round.

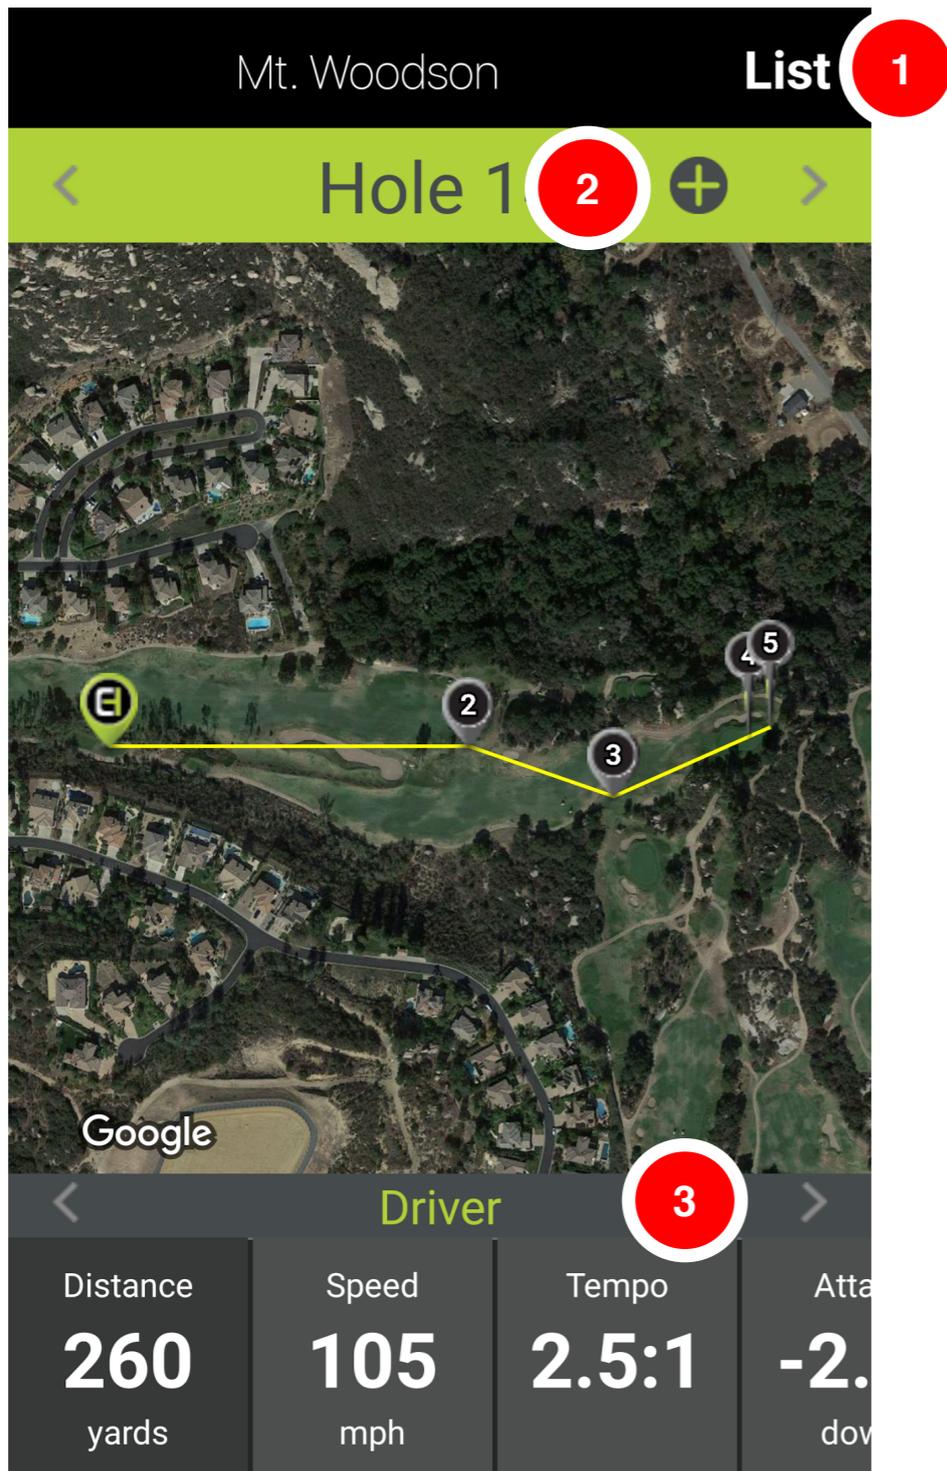

Recent Rounds - Map -


- 1 Tap **List** to view the list of shots on the hole being mapped.
- 2 Tap **+** to add a shot or putt.
- 3 Tap **< >** to change to the previous or next shot.

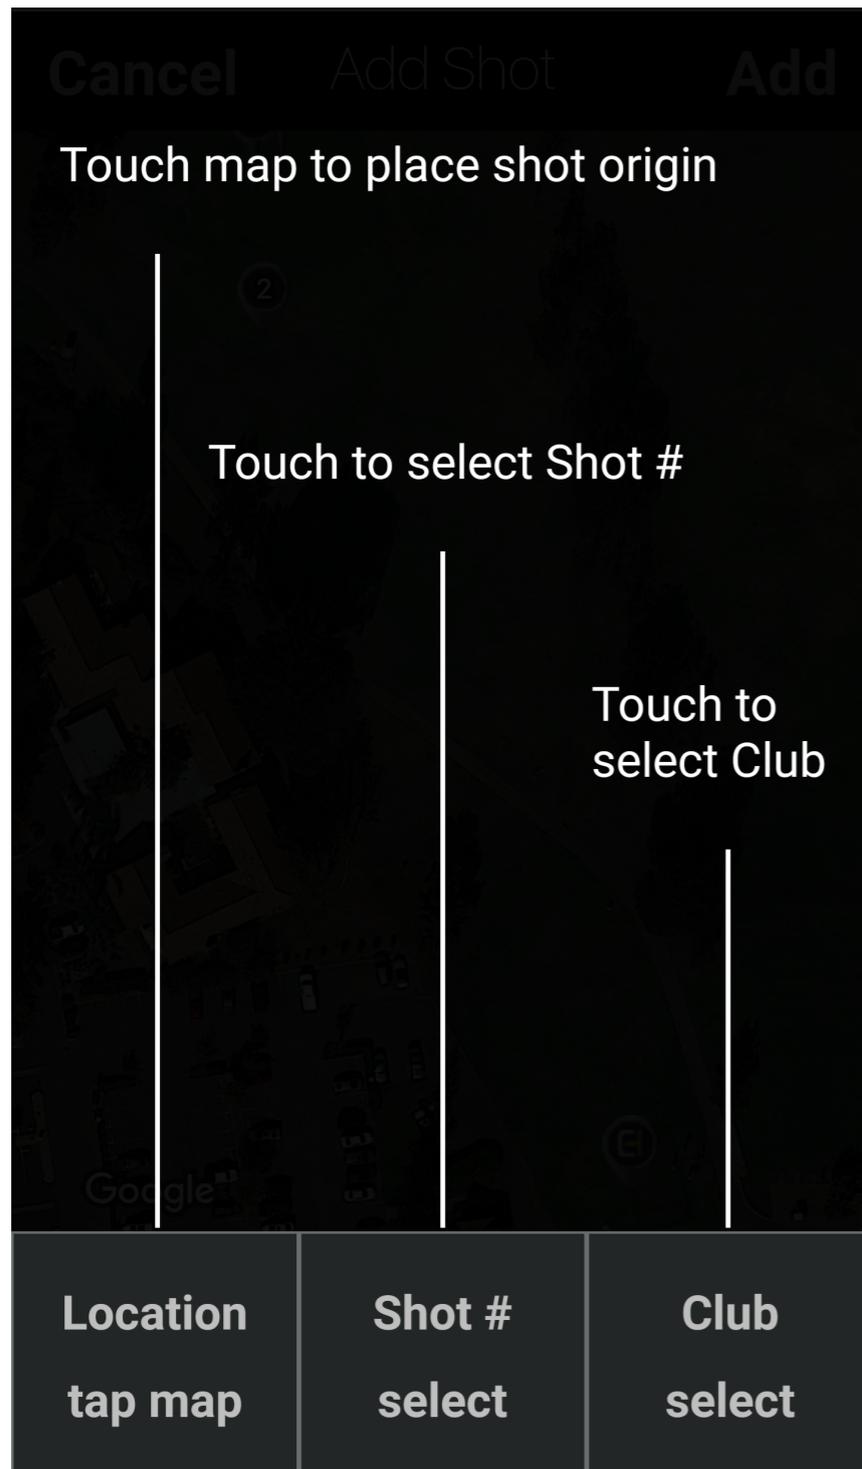

Recent Rounds

- Add Shot Screen Overlay -


- The first time the Add Shot screen is displayed, this overlay is presented.
- Tap anywhere on the screen or the back button dismiss the overlay.

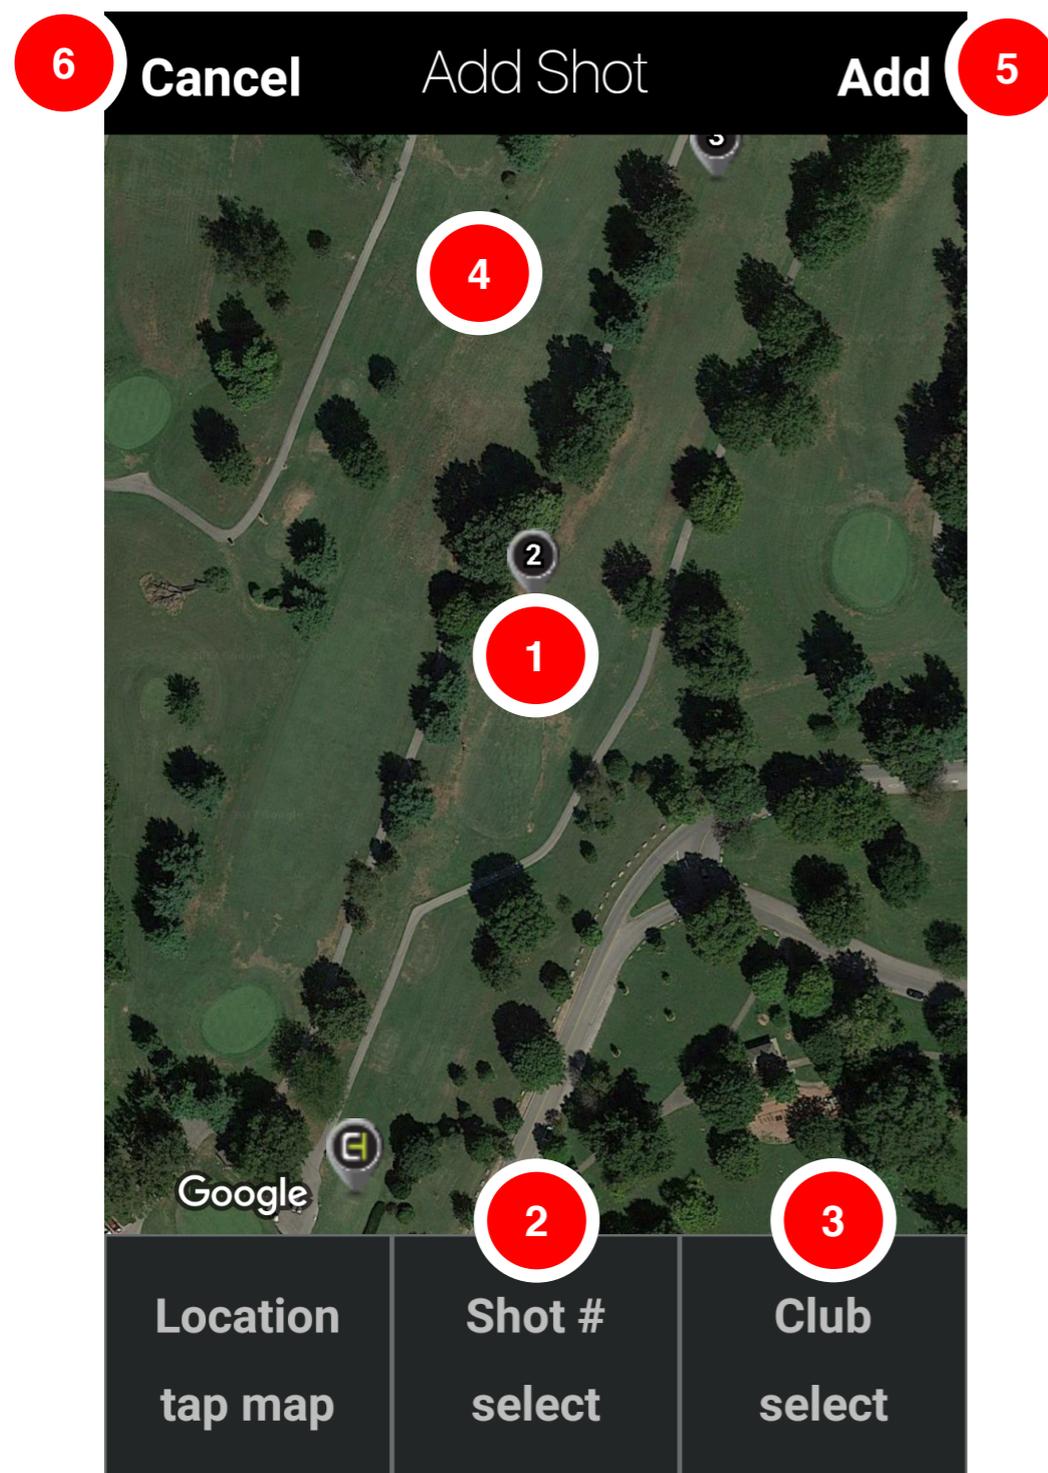

Recent Rounds - Add a Shot -

- 1 Map of hole and all the shots currently on it.
- 2 Tap **Shot #** to select the number of the shot being added.
- 3 Tap **Club** to select the club type for the shot being added.
- 4 Tap a location on the map to place the shot. Zoom in/out and pan the map through the standard Android gestures.
- 5 Tap **Add** to add the new shot.
- 6 Tap **Cancel** to cancel the shot addition.


- i When a shot is added, round stats are recalculated.
- i Any newly added swing will not contain swing data.

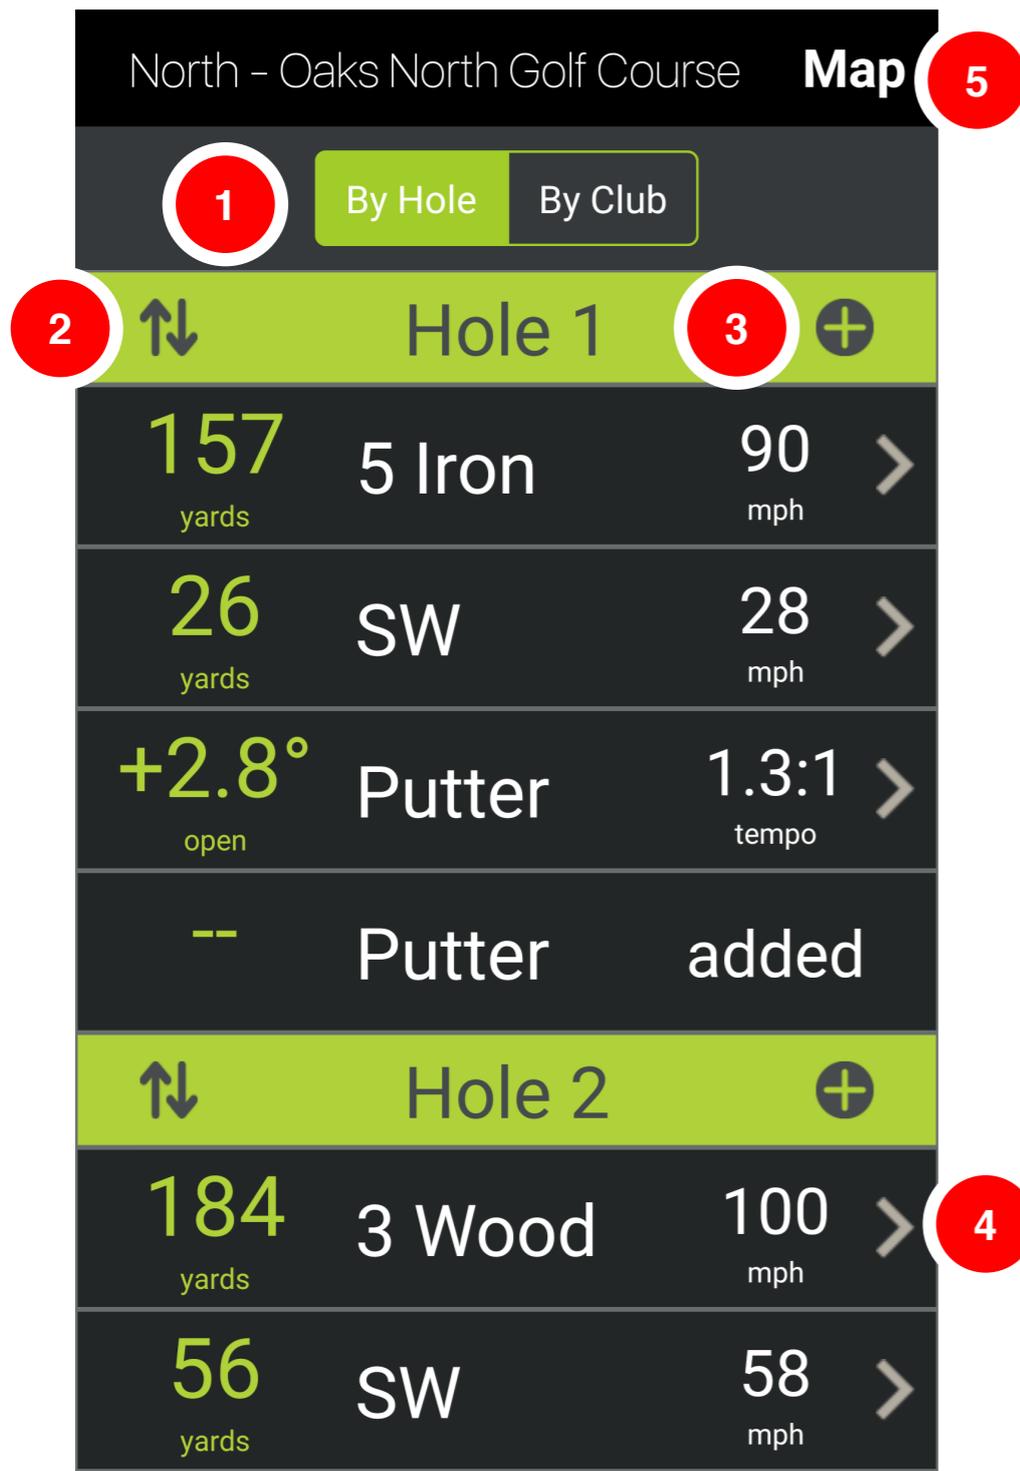

Round Shot List - By Hole -

- 1 Select **By Hole** to choose shots listed by hole.
- 2 Tap \updownarrow to move shots to a different hole.
- 3 Tap **+** to add a new shot to the hole.
- 4 Tap a shot to display the shot detail.
- 5 Tap **Map** to change to the map view.

i Holes are displayed in the order they were played.

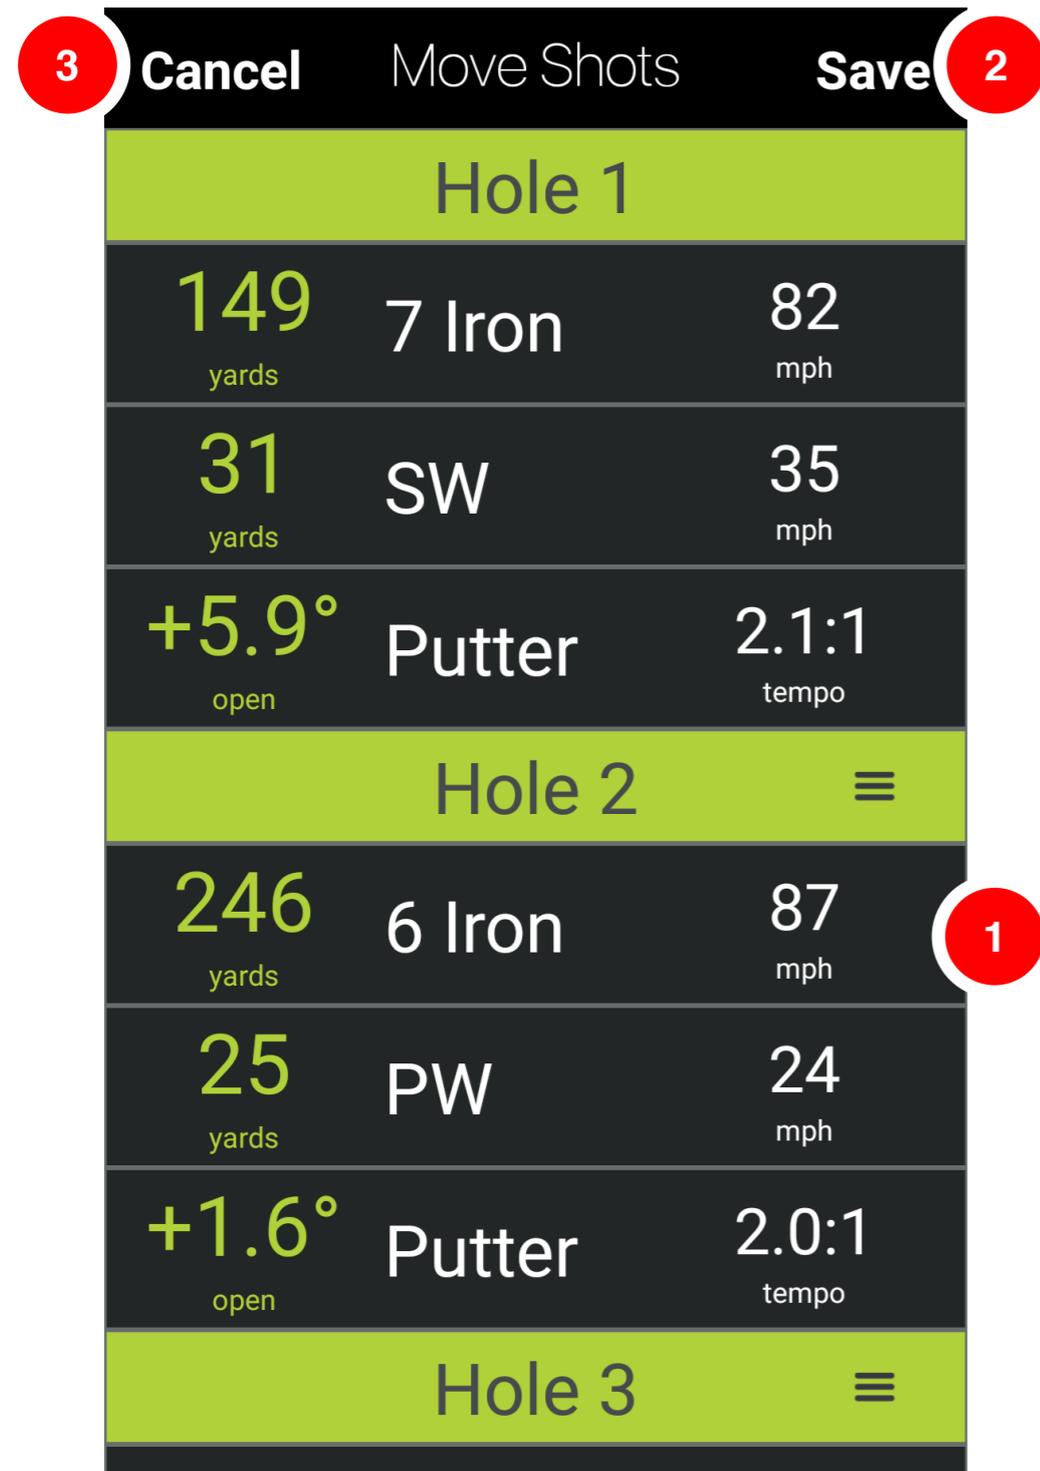

Move Shots

- 1 Tap and drag the hamburger icon to move the hole banner up or down in the shot list. A hole banner cannot be dragged beyond another hole banner.
- 2 Tap **Save** to save any changes made.
- 3 Tap **Cancel** to cancel any action.

i Moving shots among holes will cause the round stats to be recalculated.

i All swings are listed in order of recording. Only the hole headers can be moved to include/exclude swings. Individual swings cannot be moved.

North - Oaks North Golf Course **Map** 4

By Hole By Club 1

Driver

SPEED	TEMPO	TRANSITION
99 mph	2.5:1	+3.3° above
103 mph	2.5:1	+6.9° above

3 Wood

SPEED	TEMPO	TRANSITION
100 mph	2.4:1	-6.6° below

3 Iron


SPEED	TEMPO	TRANSITION
53 mph	2.4:1	+52.4° above

4 Iron

Round Shot List - By Club -

- 1 Select **By Club** to choose shots listed by club type.
- 2 Tap a shot to display the shot detail.
- 3 Tap a stat name in the stat header to pop up an overlay listing all the available stats. Selecting a different stat will change the stats viewed in that column. Any of the three of the stats displayed can be changed.
- 4 Tap **Map** to change to the map view.

i Each list of swings within a club type are ordered in chronological order from oldest to newest.

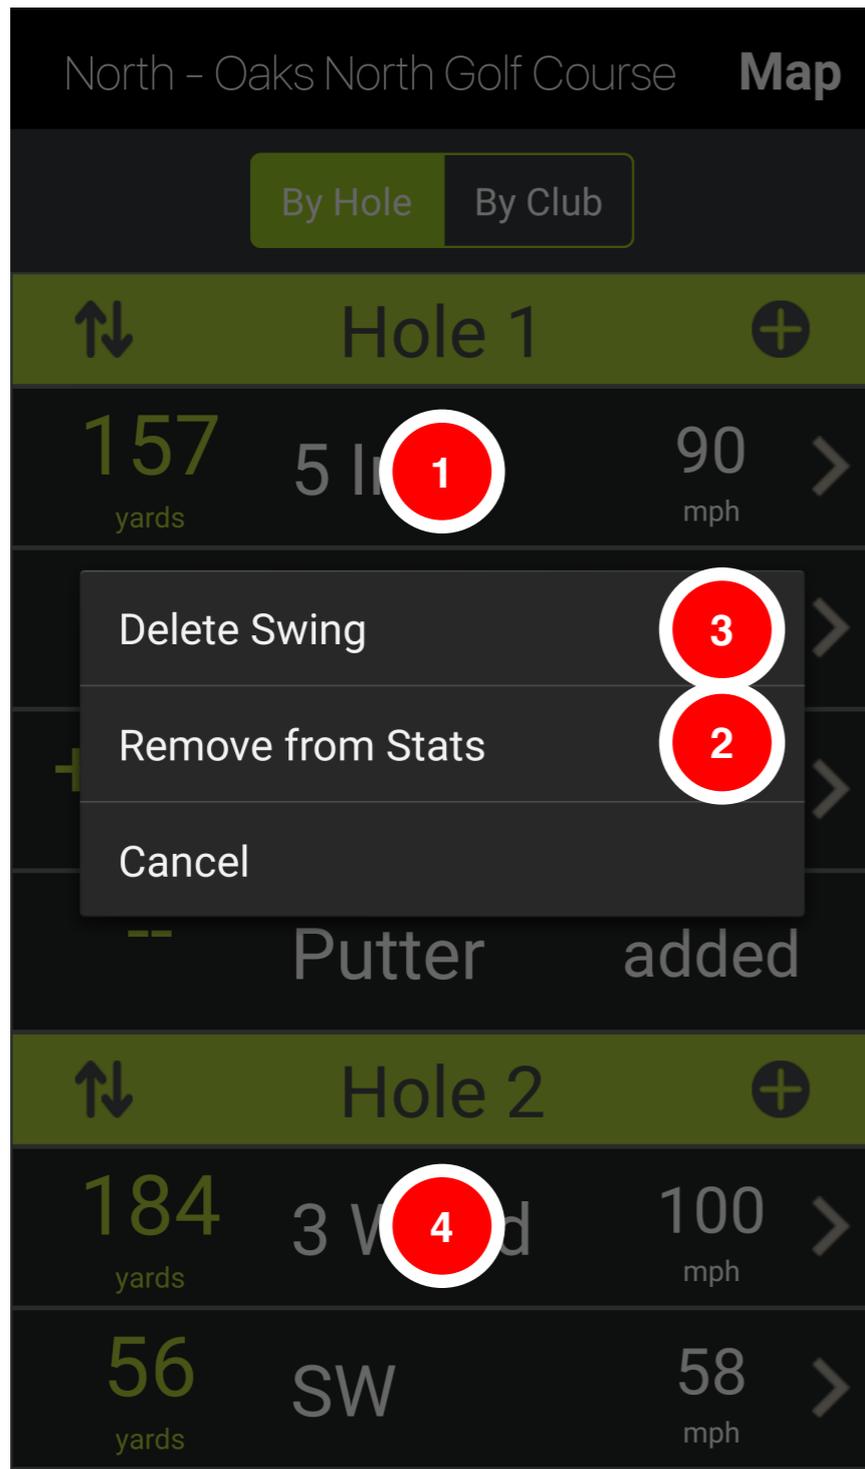



Delete/Remove/Add Shot in Stats

- 1 Tap and hold a shot to reveal the **Delete Swing** and **Remove from Stats** functions.
- 2 Tap **Remove from Stats** to remove a shot from any round stat or club stat. The shot will remain, but will not be included in any stat calculations.
- 3 Tap **Delete Swing** to delete a shot permanently. A confirmation dialog is displayed to confirm the deletion.
- 4 Tap and hold a removed shot to **Add Back to Stats**.

i Deletion, removal or addition causes the round stats to be recalculated.

Track Performance: Recent Range

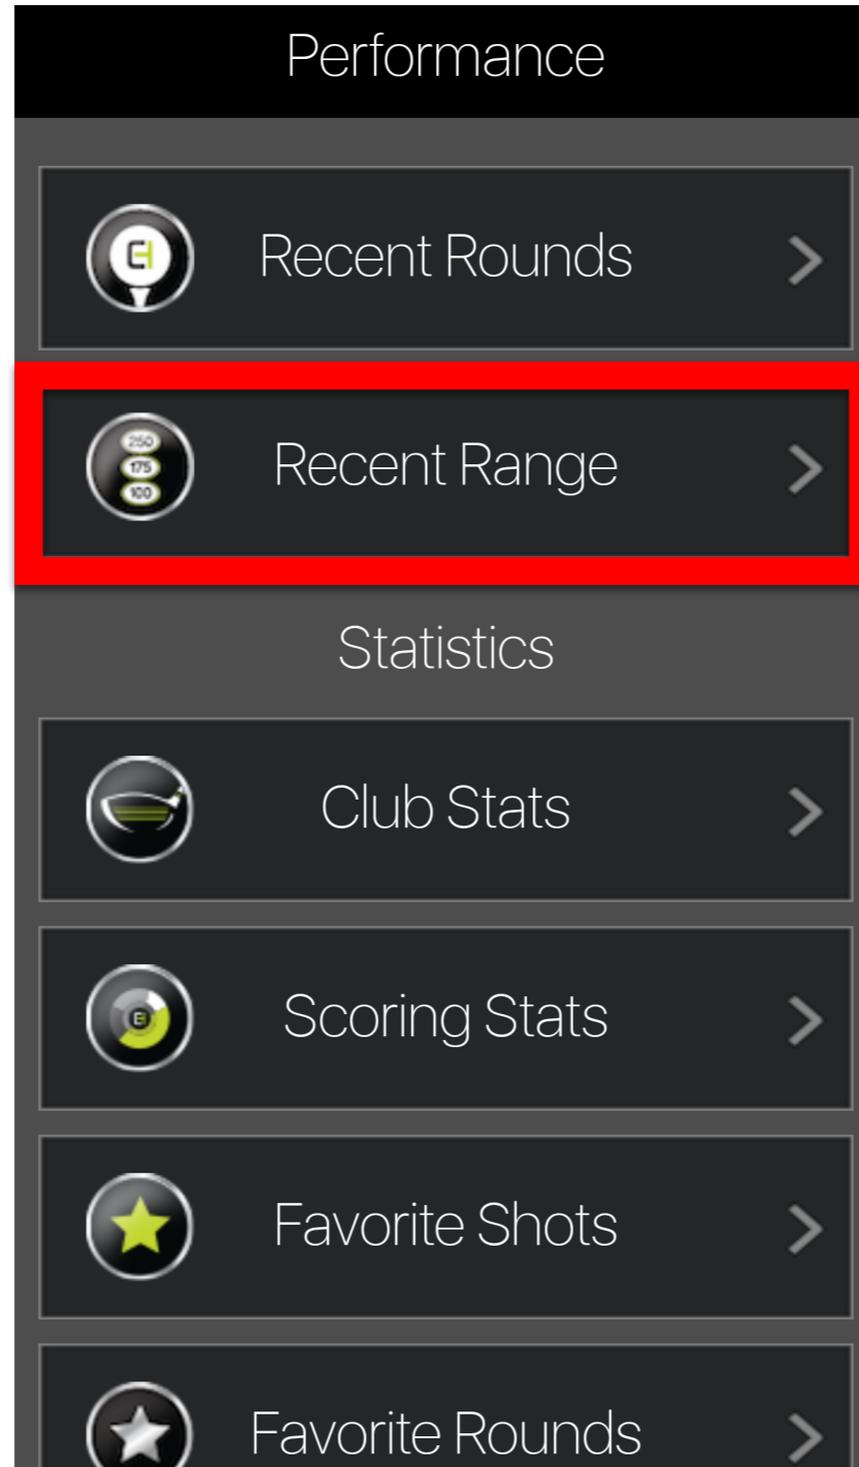


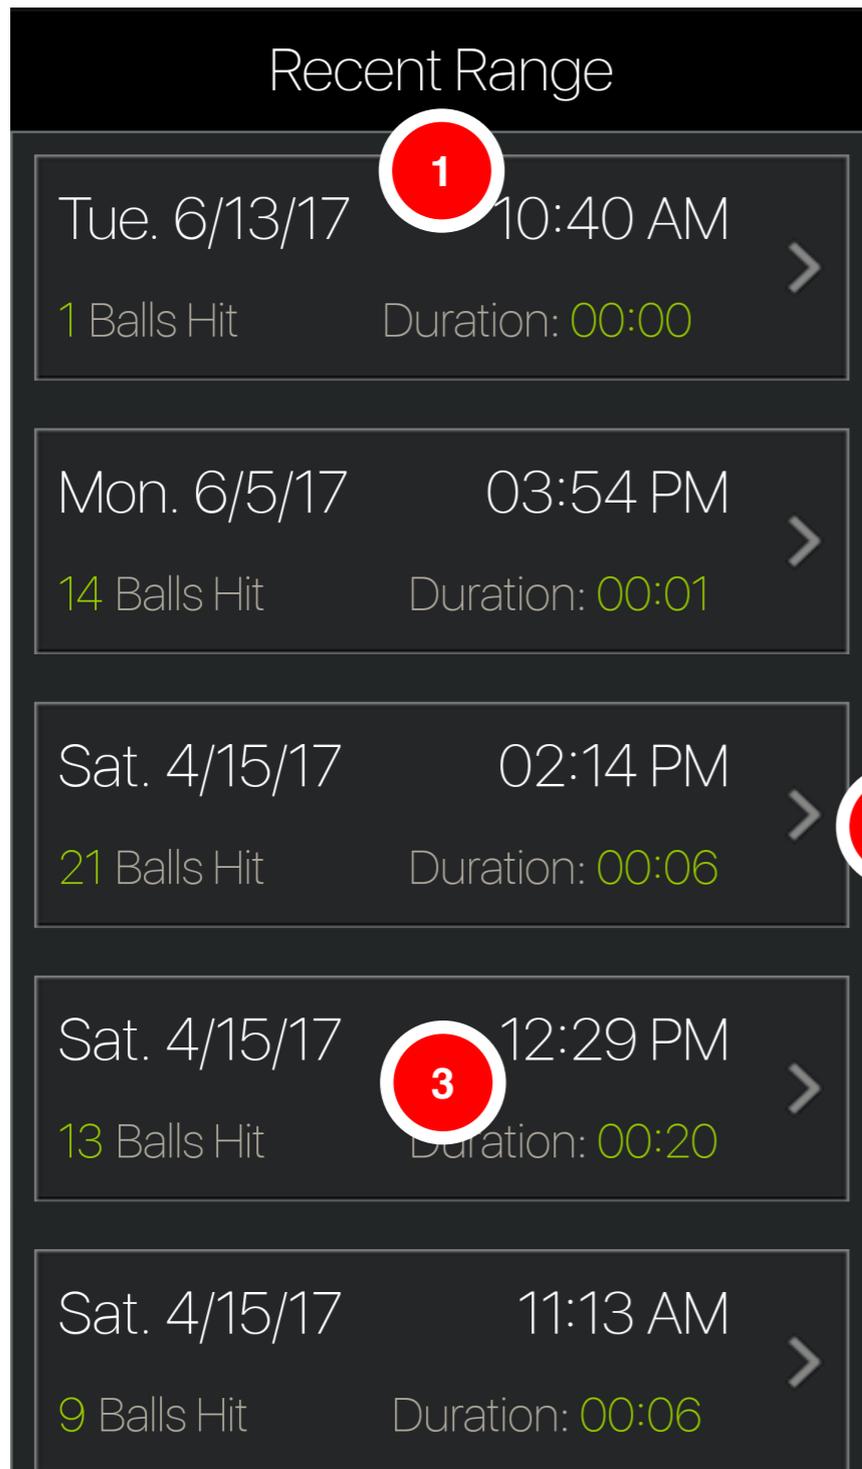


Recent Range - List -

- 1 List displays the most recent range rounds in order of newest to oldest.
- 2 Tap a row to display the list of shots for that range session.
- 3 Tap and hold a row to **Remove Range Session**.

Track Performance: Club Stats

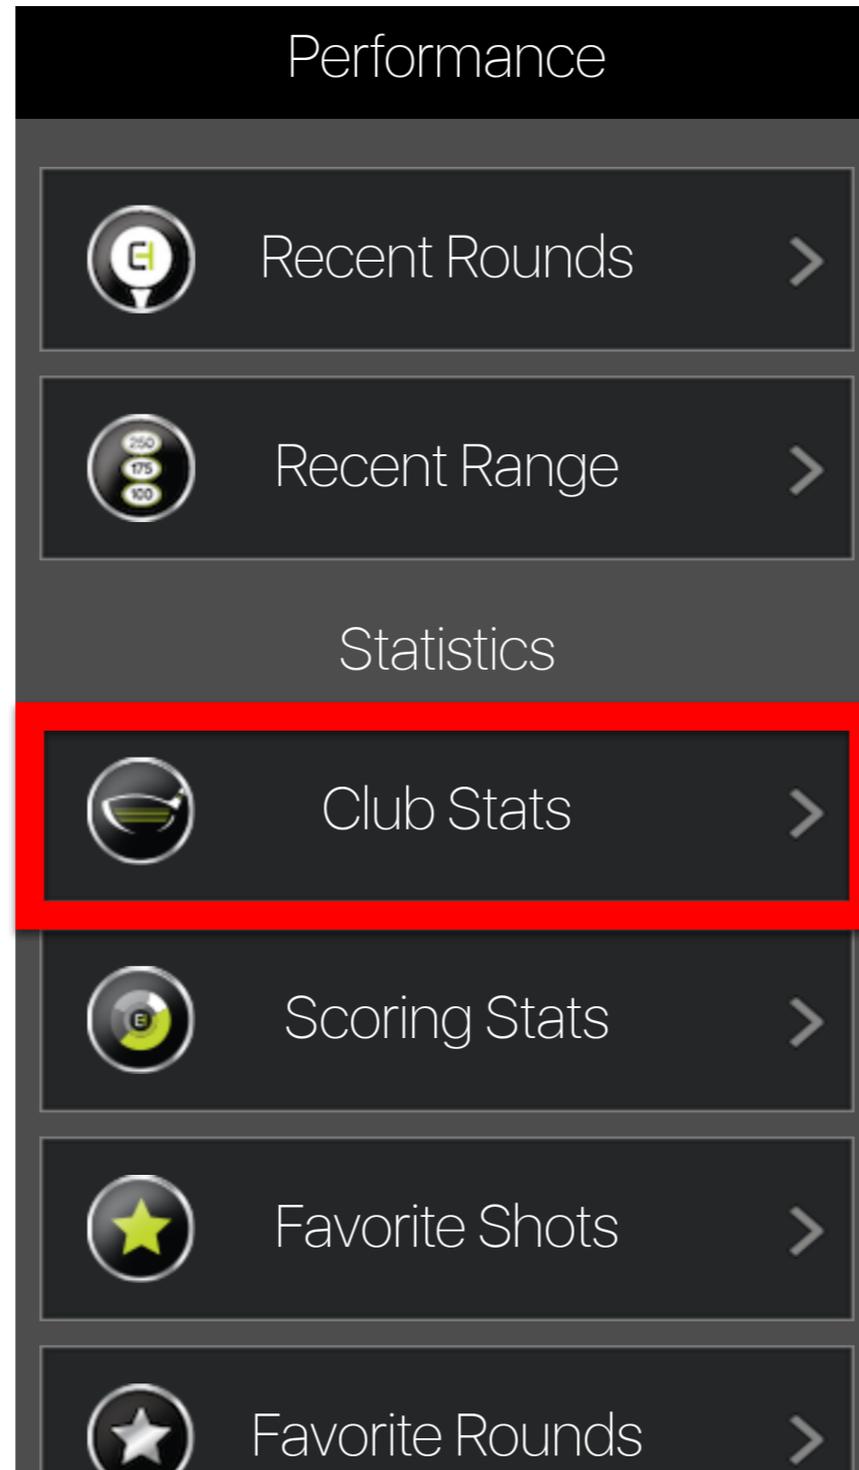

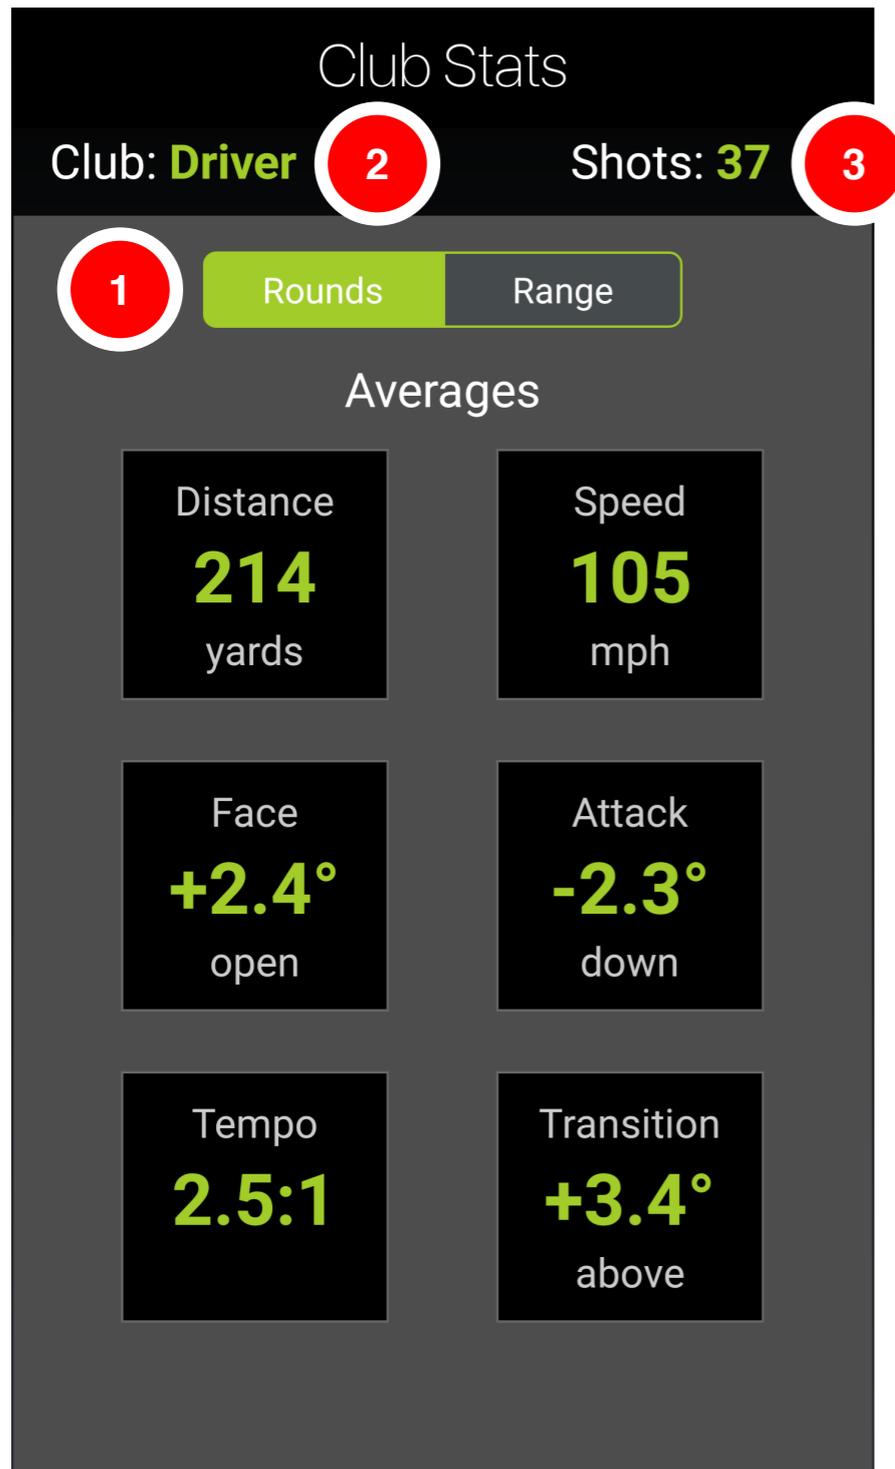

Club Stats - Rounds -

- 1** Tap **Rounds** or **Range** to view stats for rounds or range sessions.
- 2** Tap the club type name to display all the club types whose stats can be viewed. Select a new club type from the list to view its stats.
- 3** Tap the number to show the Shot List to view all shots taken with that club across all played rounds.

i Any stats for which a value can't be computed displays as "—"


Rounds			
Driver			
SPEED	TEMPO	TRANSITION	
105 mph	2.5:1	+13.3° above	>
109 mph	2.5:1	-6.3° below	>
110 mph	2.5:1	+5.7° above	>
108 mph	2.5:1	+6.0° above	>
97 mph	2	+9.9° above	>
108 mph	2.6:1	+6.5° above	>
112 mph	2.4:1	-1.3° below	>
101	2.5:1	-1.0°	>

Club Stats

- Rounds Shot List -

- 1 List displays all of the shots for the selected club. Tap a list entry to view the map view of where the shot was taken.
- 2 Tap a stat from the stat banner to select a different stat for that column.
- 3 Tap and hold a swing row to **Remove from Stats**. No confirmation dialog is issued. Removing a swing from the stats causes the swing to disappear from the list.


i The list is ordered by descending distance for rounds, and descending speed for range. For putters the swings are listed in chronological order of their swing date/time.

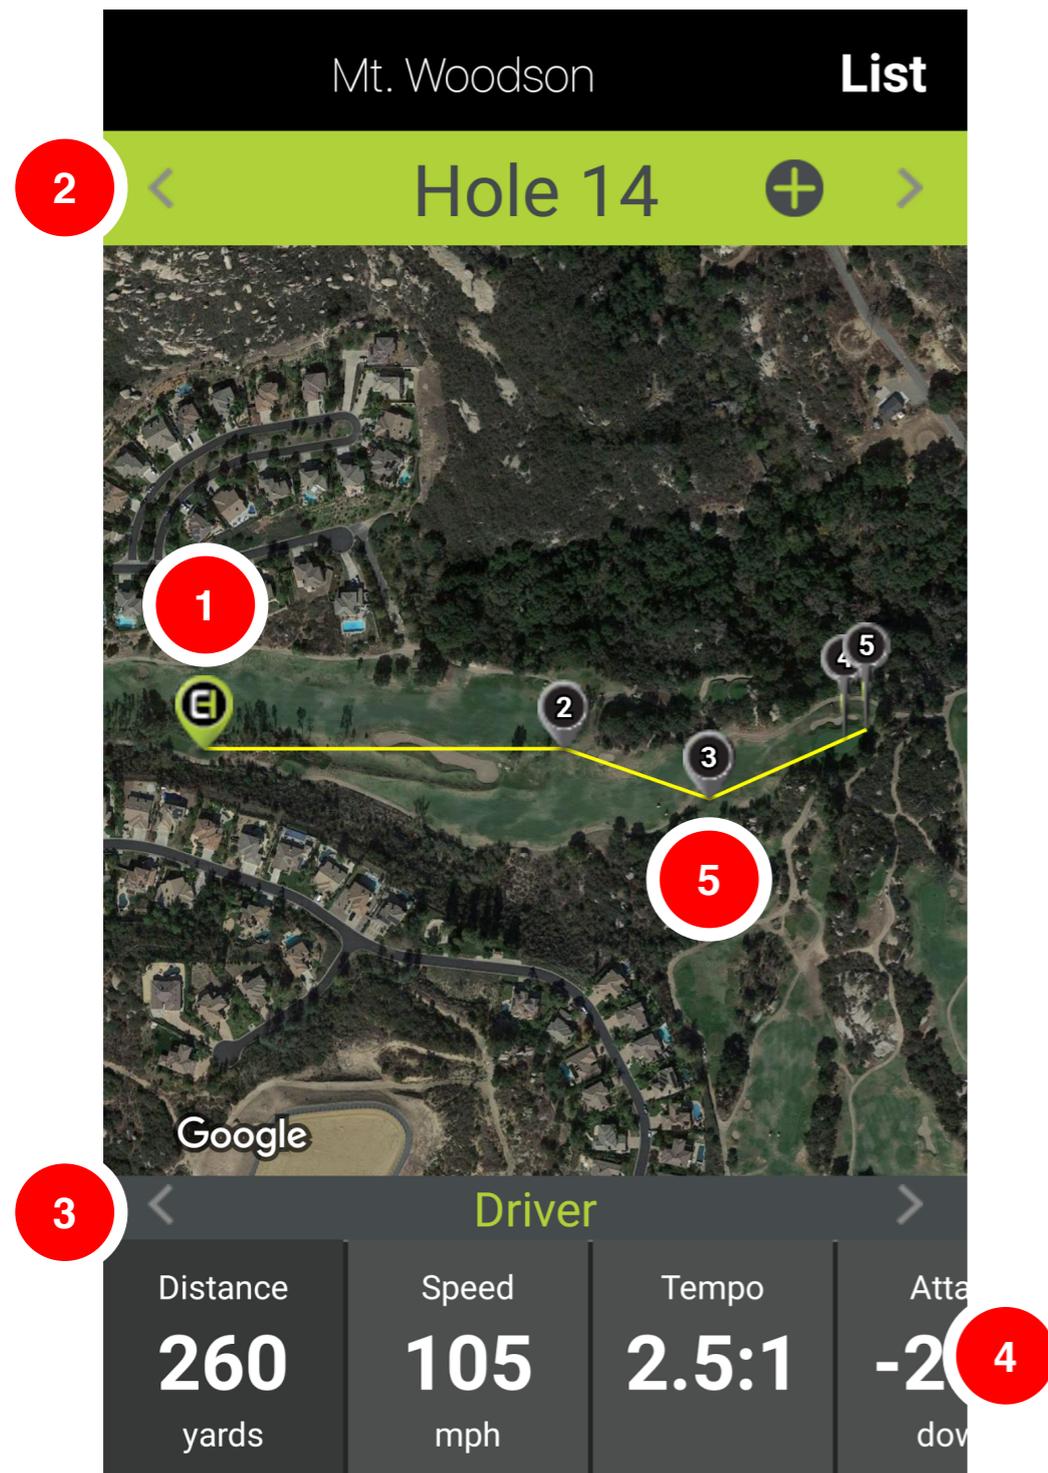

Club Stats - Selected Shot -

- 1 The shot (in green) shown on the map is the one selected from the Club Stats list.
- 2 Tap < > to change to the previous or next hole.
- 3 Tap < > to change to the previous or next shot.
- 4 Scrollable stat bar displays the stats for the currently selected shot. These stats can be reordered.
- 5 Tap any shot marker on the map to view the Shot Detail.

Track Performance: Scoring Stats

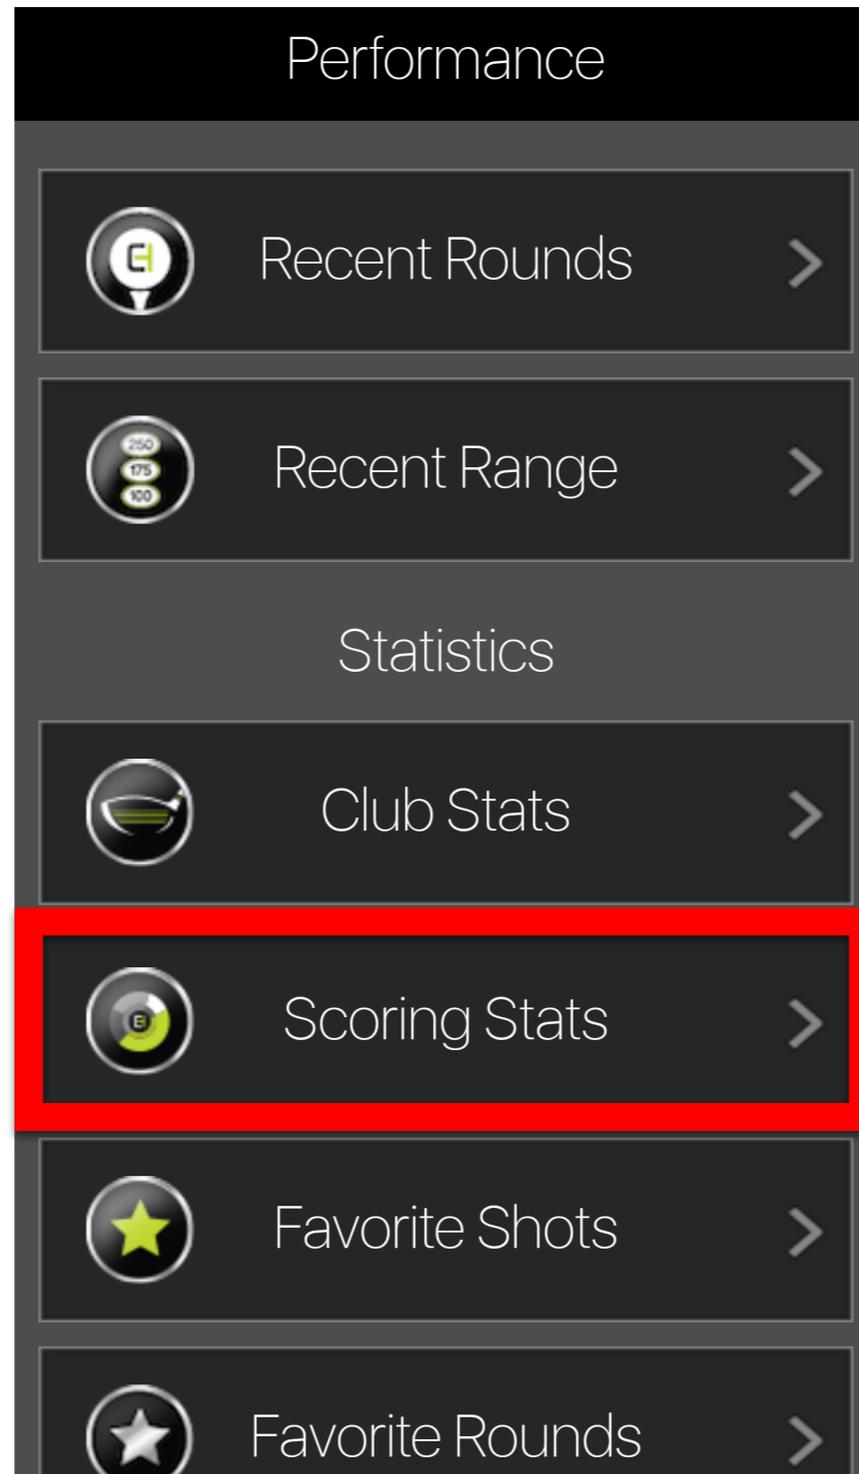

Scoring Stats	
1	Driving Avg: 214 yards Longest: 260 yards
2	Fairways Hit Avg % Fairways: 37%
3	Greens in Regulation Avg % of GIR: 31%
4	Putting Avg Putts per Round: 31

Scoring Stats

- 1 Driving displays stats specific to the driver club.
- 2 Fairways Hit displays the percentage of tee shots in the fairway on par 4 and par 5 holes.
- 3 Greens in Regulation (GIR) displays the percentage of holes where the green was reached in two shots less than par.
- 4 Putting displays the average number of putts played per round.

i Tap any row in the table to view a new screen with the detailed stats.

i These stats are only derived from rounds and do not include any shots which have been explicitly removed from stats.

Driving

Number of Drives: 37

1 Longest Drive: 260 yards

Avg Driver Distance: 214 yards

2 Driving Accuracy: 38%

Longest Drives

Mt. Woodson	7/9/15	260
Bernardo Heights	5/18/15	258
Eagle Crest	3/29/16	256
North - Torrey Pin...	2/26/15	249
East-Oaks North	7/29/15	243
Eagle Crest	3/29/16	239
North - Torrey Pin...	2/26/15	238

Driving Stats

1 Longest Drive lists the 10 longest drives in decreasing order by drive distance.

2 Driving Accuracy is the percentage of driver shots that landed in the fairway.

Fairways Hit

Number of Tee Shots: 31

1 Avg % of Fairways: 35%

2 Top Round %

East-Oaks North	7/29/15	100%
South - Oaks Nort...	6/20/17	67%
Rancho Bernardo...	4/17/15	67%
Eagle Crest	3/29/16	50%
East-Oaks North	6/24/15	50%
Bernardo Heights	5/18/15	36%
North - Oaks Nort...	5/26/17	33%
South / North - O...	3/1/16	33%
Mt. Woodson	7/9/15	31%
North - Torrey Pin...	2/26/15	29%

Fairways Hit

- 1 Average % of Fairways is the percentage tee shots on par 4 and par 5 holes that landed in the fairway.
- 2 Top Round % lists the rounds that recorded the highest percentages of fairways hit. The list includes the name of the course, the date played and the percentage of fairways hit. The list is ordered by decreasing percentage.

Greens in Regulation

Holes Played: 139

Number of GIR: 43

Avg % GIR / Round: 31%

1 Top Round %

North - Oaks Nort...	5/26/17	33%
Eagle Crest	3/29/16	22%
South / North - O...	3/1/16	22%
East-Oaks North	7/29/15	56%
Mt. Woodson	7/9/15	33%
East-Oaks North	6/24/15	38%
East-Oaks North	6/2/15	22%
North-Oaks North	6/2/15	22%

Greens in Regulation (GIR)

- 1 Top Round % lists the rounds that recorded the highest percentages of greens in regulation. The list includes the name of the course, the date played and the percentage of GIR. The list is ordered by decreasing percentage.

Putting

Avg Putts per Round: 31

1 Total % of Strokes: 42%

Avg Putts per GIR: 2

Avg Putts per Hole: 2

% of 1 Putt Greens: 29%

% of 2 Putt Greens: 55%

% of 3 Putt Greens: 10%

2 Lowest # of Putts


North - Oaks Nort...	5/26/17	19
Eagle Crest	3/29/16	38
South / North - O...	3/1/16	32
East-Oaks North	7/29/15	18


Putting

1 Total % of Strokes displays the percentage of all shots that were putts.

2 Lowest # of Putts displays the rounds that recorded the fewest putts for an entire round. The list includes the name of the course, the date played and the number of putts recorded for the round.

Track Performance: Favorite Shots

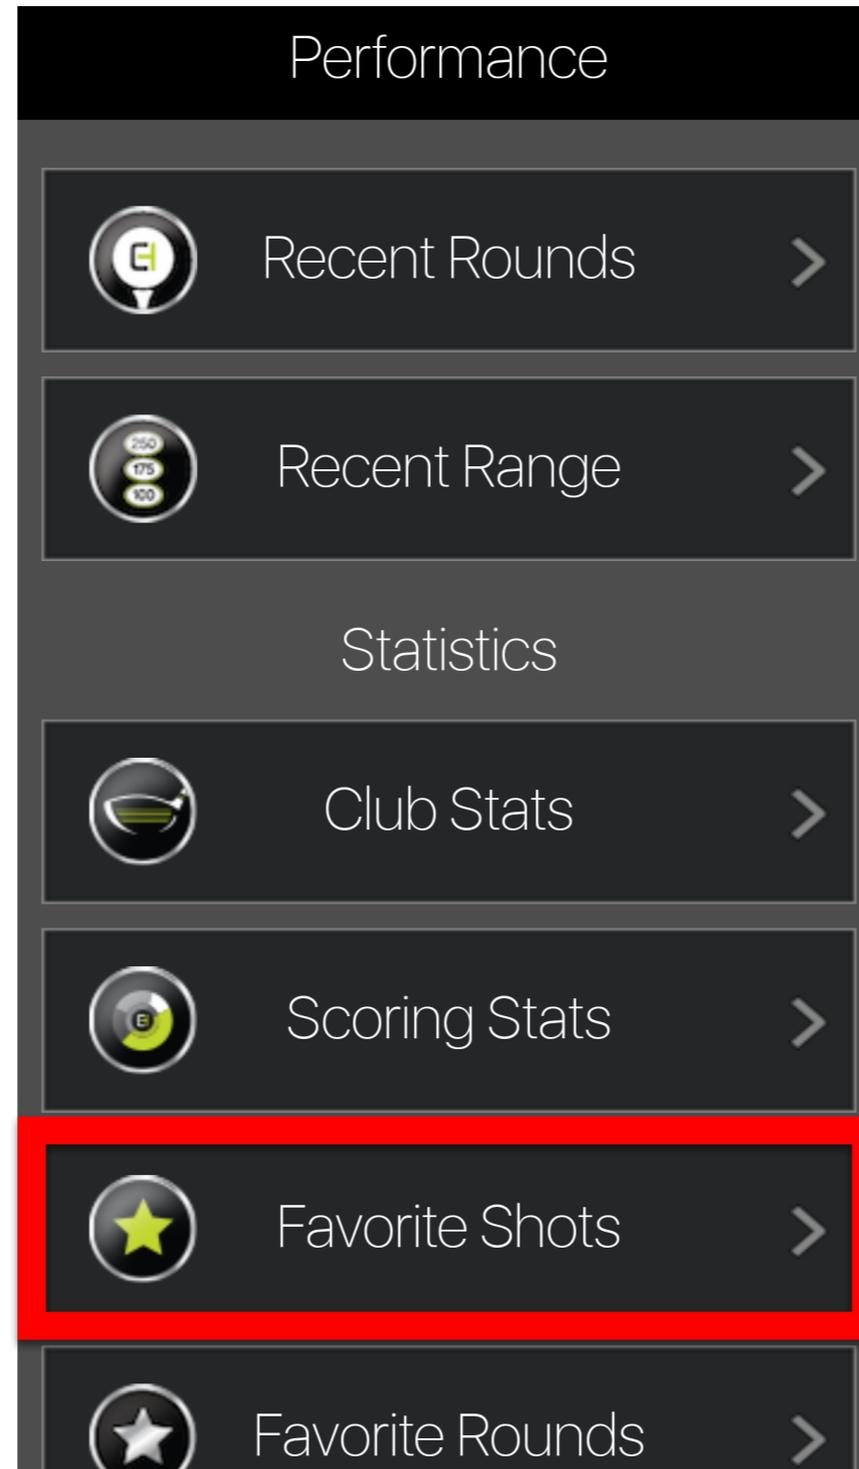


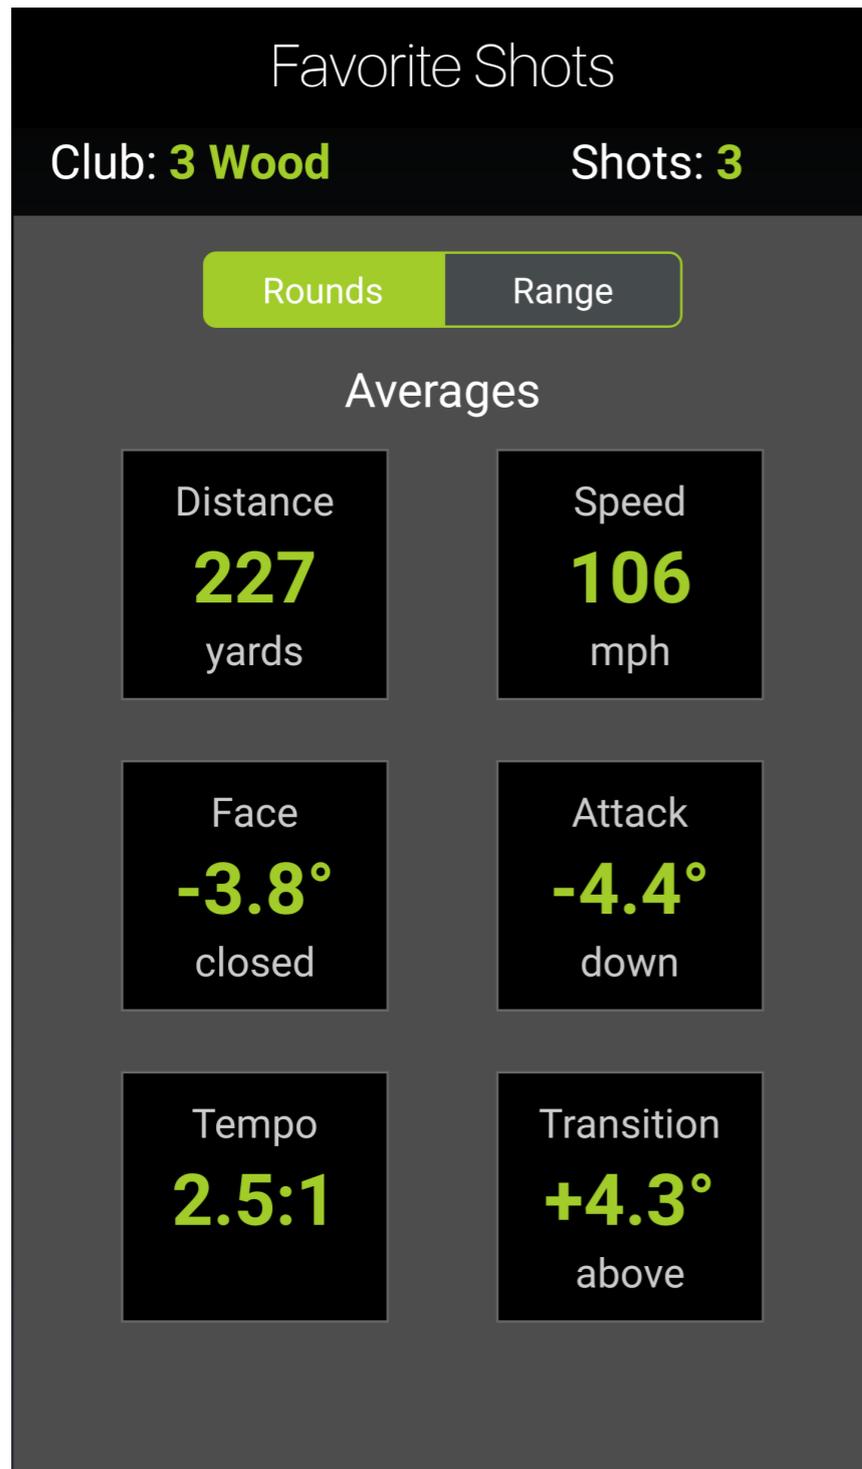

Favorite Shots

i Favorites displays information for swings that have been favorited by tapping the star on the shot detail screen.

Track Performance: Favorite Rounds

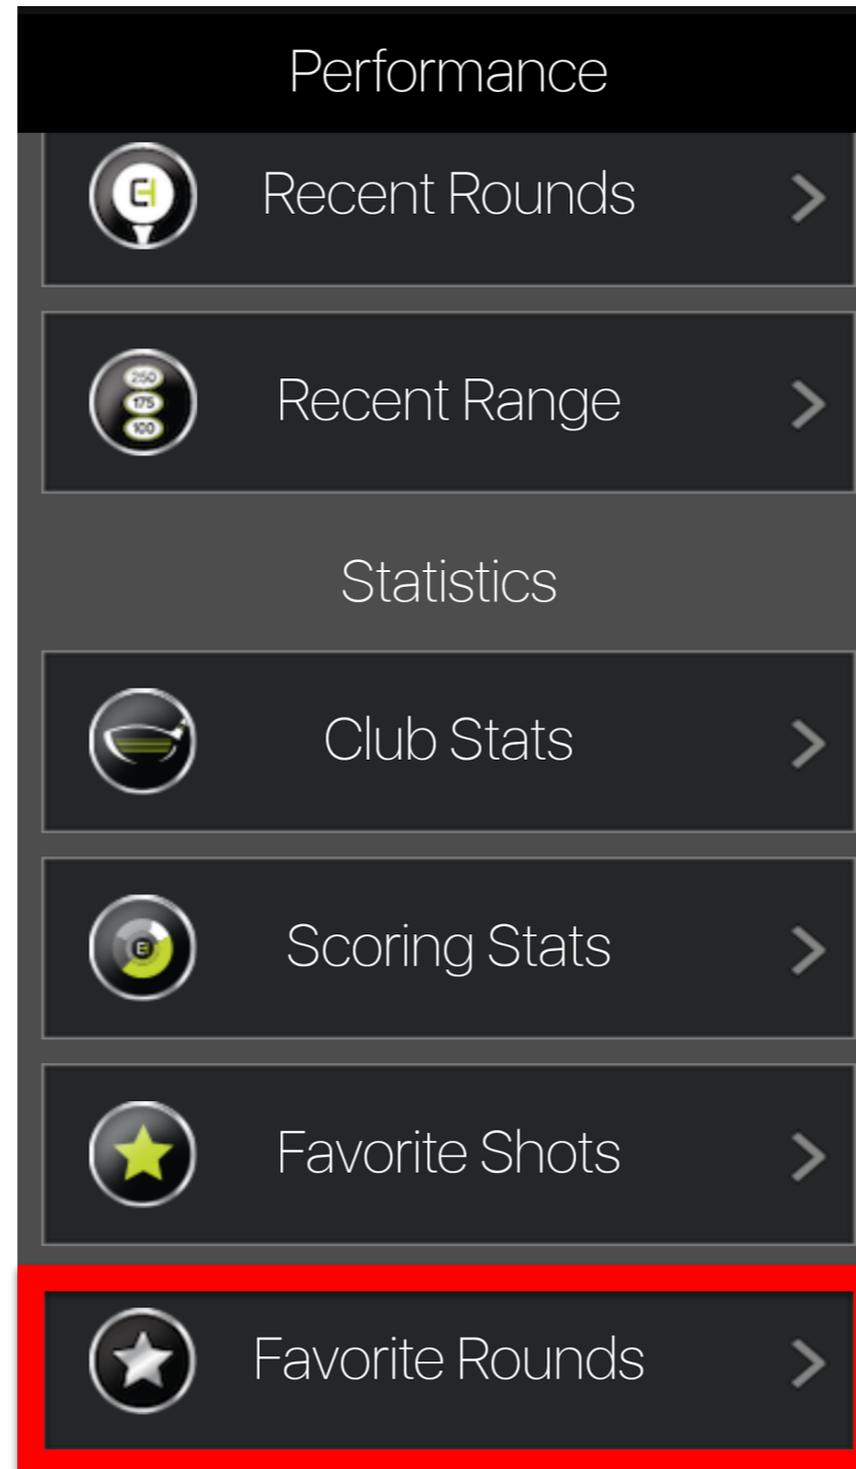

Favorite Rounds

Eagle Crest

3/29/16

Duration: 04:07



Score: 86



Driving Distance: 232 yards

Fairways Hit: 7

Greens Hit: 4

Total Putts: 38

South / North - Oaks North Golf...

3/1/16

Duration: 03:15



Score: 77



Driving Distance: 213 yards

Fairways Hit: 2

Greens Hit: 4

Total Putts: 32

East-Oaks North

7/29/15

Duration: 01:15



Score: 36



Driving Distance: 243 yards

Fairways Hit: 3

Greens Hit: 5

Total Putts: 18

Favorite Rounds

Favorite Rounds displays information for rounds that have been favorited by tapping the star in Recent Rounds. Rounds are order by date with the most recent first.