

Updating Your ClubHubs

The latest ClubHub firmware, v4.23, has improved shot detection over previous versions. If a firmware update is available you will be notified when you launch the app (figure 1). If the app is already running, a red dot next to the gear icon indicates a firmware update is available (figure 2). If you are ready to perform the update, touch "Yes" or touch the gear icon. If you prefer, you can update the sensors at a later time.

Here is the process to update the firmware on your sensors. Please have your bag of clubs beside you:

1. Respond to the question "Would you like to update now?" (of figure 1) by touching "Yes" or touch Settings (of figure 2) and then touch "Update ClubHubs." (figure 3)
2. You will see a list of your clubs and their current firmware version. You will update each club individually. Remove one club from your bag and put it "in-play". In-play simply means the club head should be on the ground and the handle should be up. ClubHub is turned "ON" when the club is put in-play.
3. In a few seconds, you should see the screen change to "Updating" and you will see a progress bar (figure 4). When the update is complete for that club, return it to your bag.
4. Repeat this process until all the clubs in your bag have been updated.

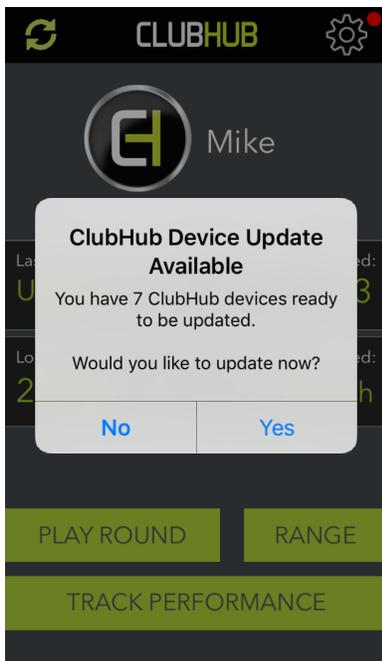


Figure 1.

When the ClubHub app is launched, you will be prompted to update the devices in need of updating.

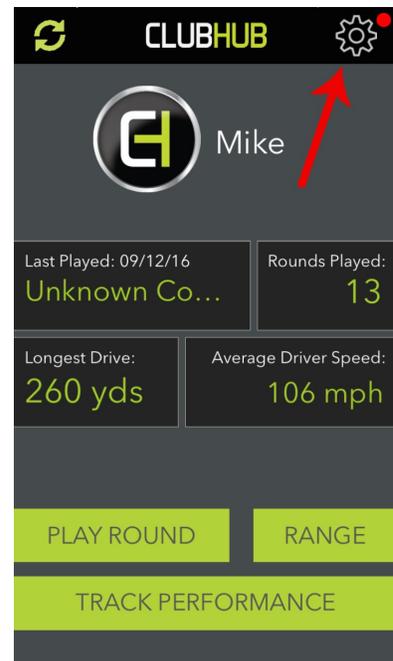


Figure 2.

Touch Settings (gear icon) to access **Update ClubHubs** on the settings page (Figure 3).



Figure 3.

Touch **Update ClubHubs** to advance to the update screen (figure 4).

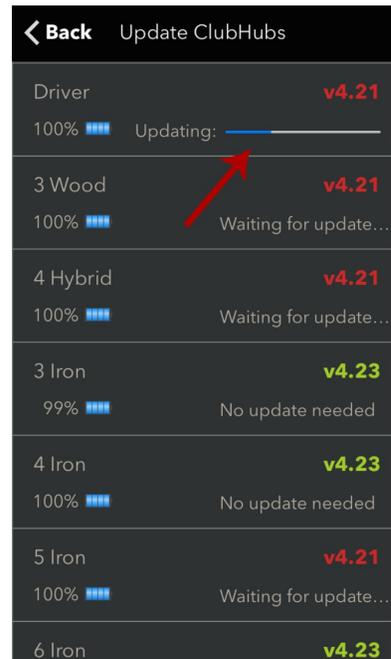


Figure 4.

Driver is currently updating. You can see some clubs have been updated (green versions), while some are still waiting for update (red version).